



DVBT2[®] DIGITAL LED TV

A1000 32" DTV DVB-T2, TVD32A1000T2

A1000 42" DTV DVB-T2, TVD42A1000T2



USER MANUAL

RECKE INDUSTRIES LIMITED
www.reckestyle.com

WELCOME YOU TO PURCHASE OUR LED TV

Welcome to high quality image world of our color LED TV
We sincerely hope the TV brings you the brand new visual
and audio enjoyment.

This operating instructions can help you operate this TV set
easily. Read this manual before operating the unit for being
familiar with its features and keep it for future reference.



 
Important Safety Instructions and Maintenance

Important Safety Instructions



CAUTION

Risk of electronic shock, do not open.
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

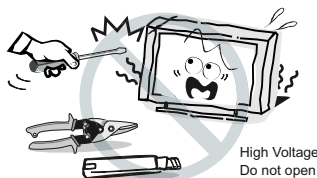

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



In case of smoke, strange noise or strange smell from the unit:

- Turn off the power switch immediately;
- Disconnect the power plug from the power outlet;
- Contact your dealer or service centre. Never attempt to make repairs yourself because this could be dangerous.

 


Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the set. Use special caution in households where children are present. The apparatus is not suitable for children under 3-year to operate.



Power supply cords should be routed safely to prevent life and property from dangerous with damaged cord.

Mains plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the mains plug of the apparatus shall be disconnected. The apparatus shall be connected to a mains socket outlet with a protective earthing connection.

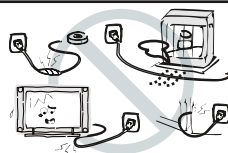


To avoid the fire, no naked flame source, such as lighted candles, should be placed on the apparatus.



Important Safety Instructions and Maintenance

 Important Safety Instructions

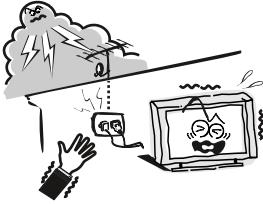

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



Always turn the set off when it is not being used. Unplug the apparatus from the AC outlet when it will not be used for a long period of time. And when there is a lightning, unplug the unit from the AC outlet immediately. Never touch the antenna wire during lightning.

 


Do not pull the plug out by the wire;
Never touch the plug with wet hands.



Excessive sound pressure from earphones and headphones can cause hearing loss.

Installation

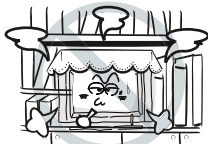

The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, tablecloths, curtains, etc.

At least 10 cm space should be left around the apparatus for sufficient ventilation.

 


The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Place the apparatus in such a position that the screen is not exposed to direct sunlight. It is best to have soft indirect lighting while watching and avoid complete dark environment and reflection from the screen as these may cause eye fatigue.

Keep the product away from high magnetic field (i.e. power-amplified power speaker) to avoid affecting the tint;

Important Safety Instructions and Maintenance


Installation




Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious personal injury as well as damage to the product. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



 Do not place this apparatus near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or a swimming pool; and the like;

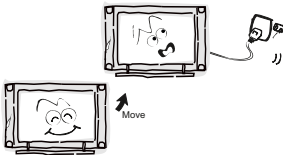

 When the TV being moved in from cold place, it needs some right time for dew inside unit evaporating fully before turn on the unit;

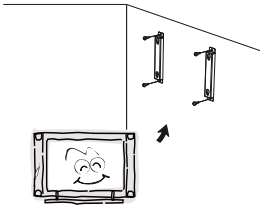

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Cleaning



Unplug this apparatus from the AC outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning;

Welcome you to purchase our LED TV

Welcome you to high quality image world our color LED TV brings you. We sincerely hope the TV brings you the brand new visual and audio enjoyment.

This operating instructions can help you operate this TV set easily.

Read this manual before operating the unit for being familiar with its features and keep it for future reference.

Table of Contents

Introduction

Features.....	5
Specifications.....	6

External Connection

Stand and wall-mounted.....	7
-----------------------------	---

General Description

Overview of front and side panel.....	10
Overview of back panel.....	11
Overview of remote control.....	12
Teletext.....	14

General Description

Installing Batteries in the Remote Control.....	16
---	----

External Connection

Antenna connection.....	16
Connecting VCR.....	17
Connecting a Camcorder.....	18
Connecting a DVD Player/Set-Top Box.....	19
Connecting a DVD Player/Set-Top Box via DVI	20
Connecting DVD Player/Set-Top Box via HDMI	21
Connecting Digital Audio System.....	22
Connecting PC.....	23

Supporting signals	23
---------------------------------	----

Basic Operation

Turning the TV On and Off.....	24
Menu operation.....	25

Menu system instruction	27
--------------------------------------	----

Digital Media Player	37
-----------------------------------	----

Reference

Troubleshooting.....	46
Picture defects and the reason.....	47
Accessories.....	47

Features

- TV adopts 32"/42" LED display screen.
- Low power consumption complied with energy saving Standard.
- Backlight adjustable protects your eyes, saves energy and extends the life time.
- HDMI port (official HDCP inside) with legal unlimited use.
- Embedded multimedia player (support MPEG, MKV).
- Multi-language OSD.
- Auto tuning and fine tuning.
- Programmable Auto On/Off.
- Multi-language subtitle.
- Support USB 2.0/HDMI 1.4.

Input terminals used for external equipment connection

1 x ANTENNA jack
2 x USB inputs
1 x AV input
1 x SPDIF output
1 x PC input

2 x HDMI inputs
1 x COMPONENT input
1 x Headphone output
1 x VIDEO output

Introduction

Specifications

Model		A1000 32" DTV DVB-T2	A1000 42" DTV DVB-T2
Display size		32" Diagonal (max.)	42" Diagonal (max.)
LED panel resolution		1366X768	1920X1080
Speaker output power		≥5WX2	
Power supply		~110-240V, 50/60Hz	
TV receive system		Digital: DVB-T DVB-T2 Analog: PAL D/K,B/G,I SECAM D/K,B/G	
Frequency range		Digital: 5-12, 21-69 Analog: 46.25MHz-855.25MHz	
Video in		PAL/NTSC/SECAM	
Power consumption		55W	90W
Standby consumption		≤0.5W	
Antenna Input		75 ohms, unbalanced	
Controller power		DC 3V (Two AAA size batteries)	
Dimensions (LXWXH)	TV with stand	736x180x496.5mm	956x240x622mm
	TV without stand	736x75.4x443.5mm	956x80x567mm
Weight (Net weight)	TV with stand	7.3Kg	11.7Kg
	TV without stand	6.2Kg	9.4Kg
Work Temperature		0℃-40℃	

Note:

1. Due to TV may be used with different display screen, weight marked in this user's manual or in packaging box are subject to change without notice.
2. In case of any design change, a notice will not be released.

External Connection

Stand and wall-mounted

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

 
 
-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on.

This will prevent it from being damaged.

Assembling instruction:

- 1) Fix the bracket ② and the stand ④ with screws ⑥ and cushions ⑤.
- 2) Put the television on the table, fix the stand and the unit ① with four screws ③ given in the carton.

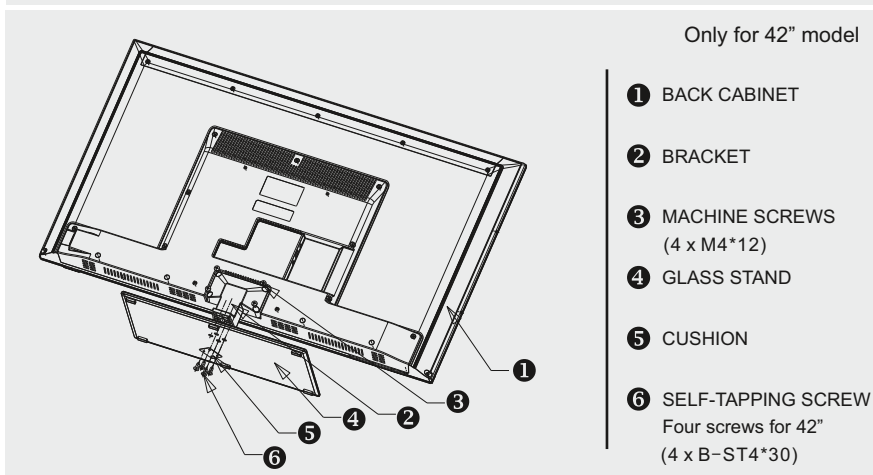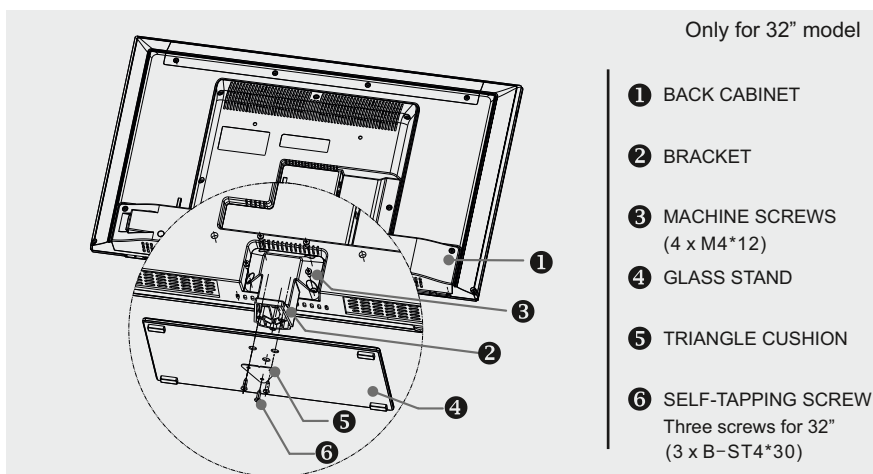

External Connection

Stand and wall-mounted

Securing the TV Stand

Caution: Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions at the start of this manual. For added stability, install the anti-fall device for safety purposes as follows.

ALTERNATIVELY

To secure the TV to the table:

- 1- Remove the screws from the center back of the stand, put the screws into the clamps, and then fasten the screws onto the stand again.
- 2- Assemble the stand to the TV.
- 3 - Put the screws into the clamps and firmly fasten them on the table. Confirm that the screws have been firmly installed on the table.

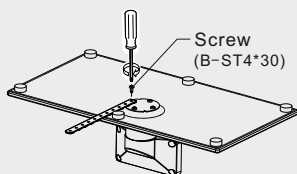 


Figure1

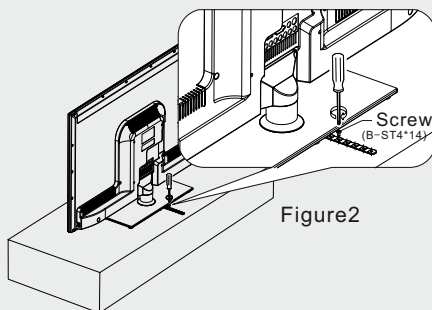 


Figure2

Note: The illustrations above are for explanation purposes and may vary slightly from actual product.



B-ST4*30



M4*12

 


B-ST4*14



External Connection

Stand and wall-mounted

How to mount the LED TV on the wall

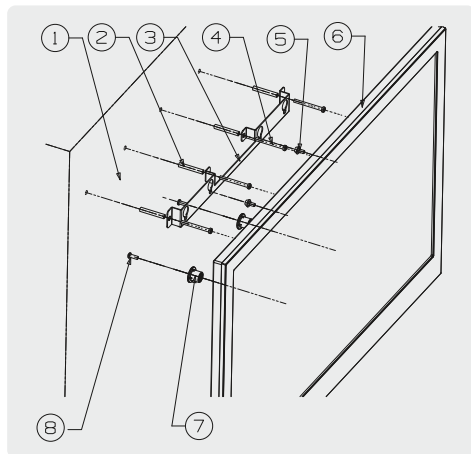

  1. Wall
2. Nylon sleeve
3. Wall-mounting bracket
4. Self-tapping screw
5. Wall-mounting screw
6. Rear cabinet
7. Wall-mounting Bolt
8. Screw

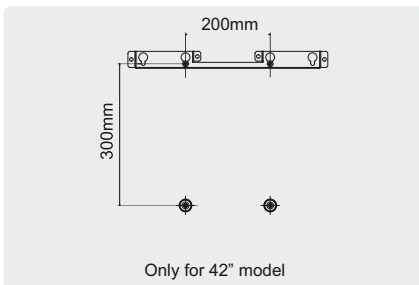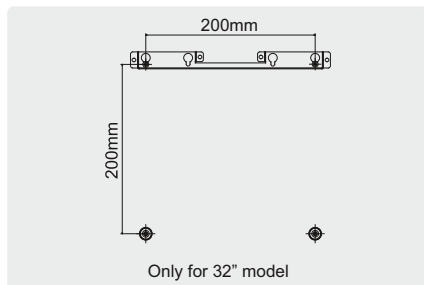

Wall-mounting instruction:

1. Please ensure the distance of wall-mounting holes is 200mm or 400mm on the back cabinet before you mounting your TV on the wall.
2. Mark the four mounting screw holes with pencil on the wall by using wall-mounting bracket(4) as ruler. Drill these four mounting screw holes on the wall.
3. Drive Nylon sleeves(2) into the screw holes on the wall.
4. Fasten wall-mounting bracket (3) on the Nylon sleeves (2) with self-tapping screws (4) on the wall.
5. Fasten wall-mounting screws (5) into the two screw holes on the rear cabinet(6);
6. Tighten wall-mounting bolt(7) on the bottom of the rear cabinet with screws (8).
7. Left the TV and hang it on the wall by two people.

 
Note:

1. Please mount your TV on the strength of the wall for withstanding the TV's weight.
2. Be careful not to scratch panel and TV cabinet when your fasten the screws on the TV.

General Description

Overview of front and side panel

The buttons on the lower-right panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

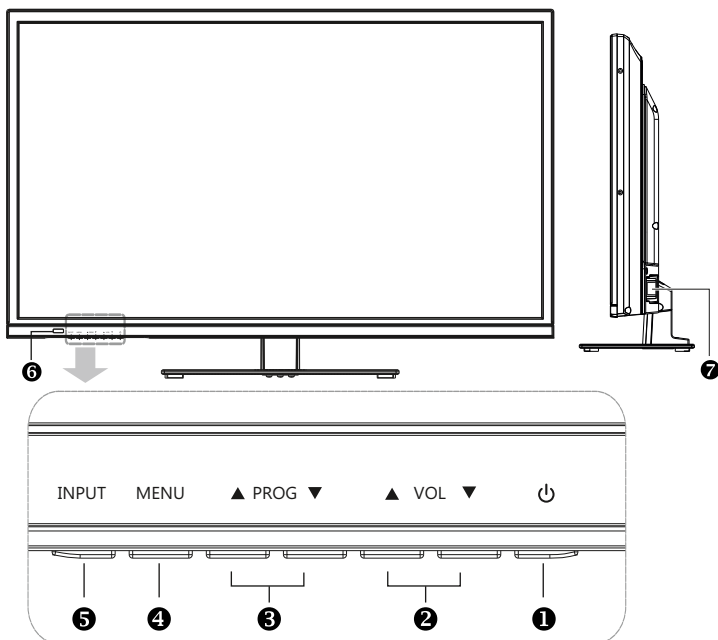

1 Standby button

Press button to toggle between normal and standby mode.

2 VOL

Press to increase or decrease the volume. In the on-screen menu, use the VOL buttons as left/right arrow buttons.

3 PROG

Press to change programs. In the on-screen menu, use the PROG buttons as up/down arrow buttons.

4 MENU

Press to see an on-screen menu of your TV's features.

5 INPUT

Toggles between all the available input sources.

6 REMOTE CONTROL SENSOR

Aim the remote control towards this spot on the TV.

POWER INDICATOR

Red: In standby mode.

 
Green: In power on mode.

7 POWER SWITCH

General Description


Overview of back panel

You can connect the TV with video devices such as DVD/VCD player, VCR and video camera to enjoy the high quality picture.

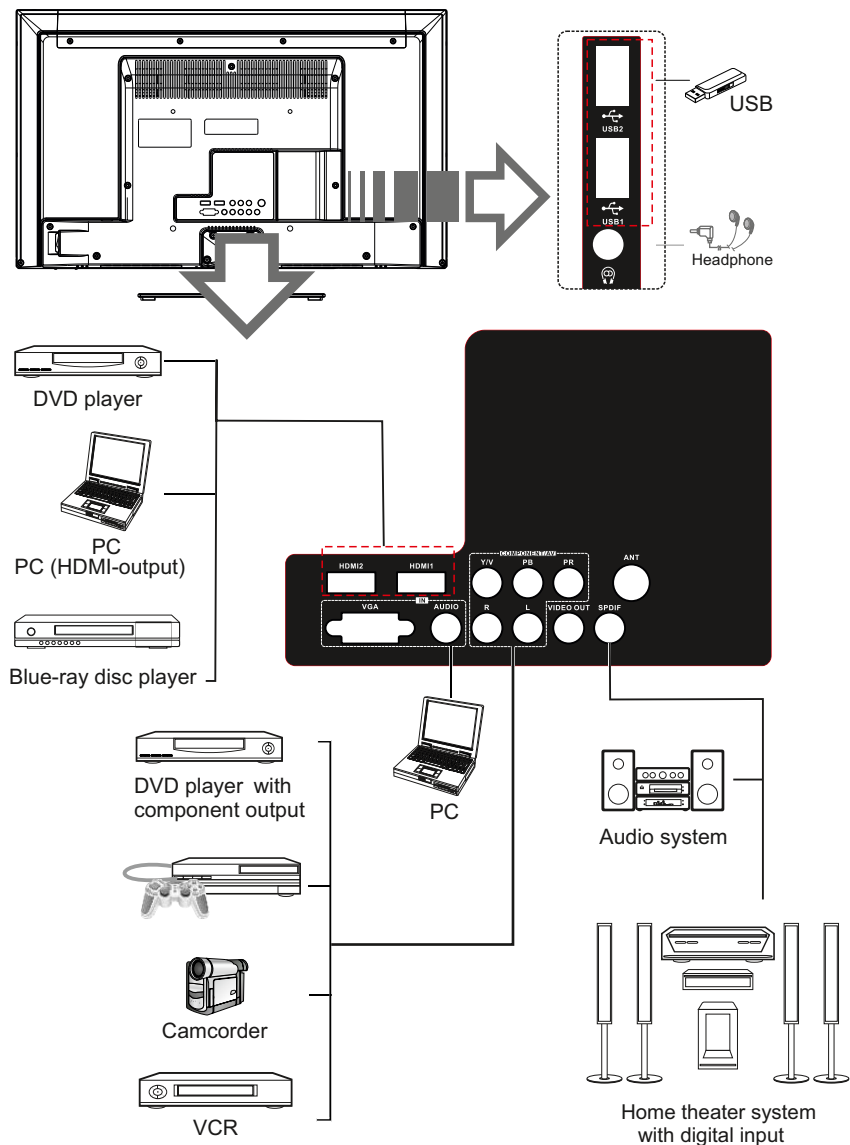

General Description

 
Overview of Remote Control

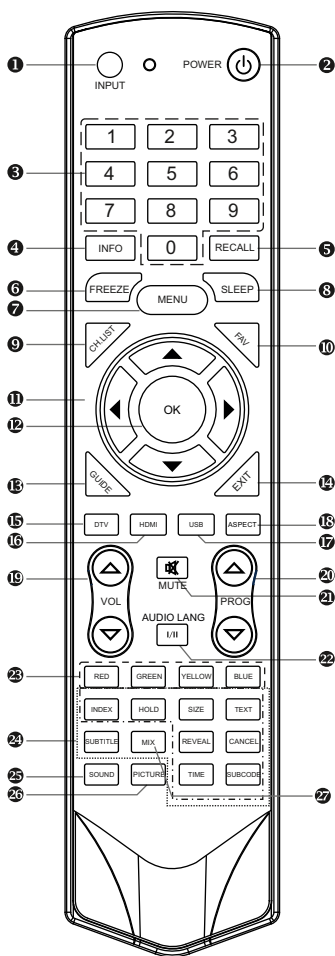

- 1. INPUT:** This button is used to switch among different sources: DTV, ATV, AV Component, PC, HDMI1, HDMI2, USB1, USB2.
Select a source and press OK button to confirm.
- 2. POWER:** Press this button to switch to standby mode, and press it again to turn TV on.
- 3. Digital buttons(0~9):** To select channel with digital buttons.
- 4. INFO:** This button is used to start the "Current Service Banner" application that provides information about the current service. In USB source, the button is used to provide information about video.
- 5. RECALL:** Switch to the previous program.
- 6. FREEZE:** Press this button to freeze the image.
Note: The function is not available for the TV.
- 7. MENU:** Press this button to display main menu or exit the menu. When you are in the submenu, you can press it to return the main menu.
- 8. SLEEP:** TV will be switched off automatically at preset sleep time if you have set sleep timer. Use your remote control to set the sleep timer.
Press SLEEP button on the remote control, then press this button again to set sleep time: off, 10, 20, 30, 60, 90, 120, 180, 240 min. Press MENU button to exit when you have set the sleep timer. After you have set sleep timer, press SLEEP button again, you will see the remaining time.
Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.
- 9. CH.LIST:** Press it to show channel list on screen.
- 10. FAV:** Press it to display favorite list.
- 11. Arrow buttons:** Press these buttons to move cursor up/down/left/right for menu.
- 12. OK:** In main menu and submenu it is a validation button.
- 13. GUIDE:** In DTV source, this button is used to start the EPG application.
- 14. Exit:** Exit the menu.
- 15. DTV:** Switch to DTV mode.
- 16. HDMI:** Switch to HDMI1 mode directly, press twice to switch to HDMI2.

General Description

 Overview of Remote Control

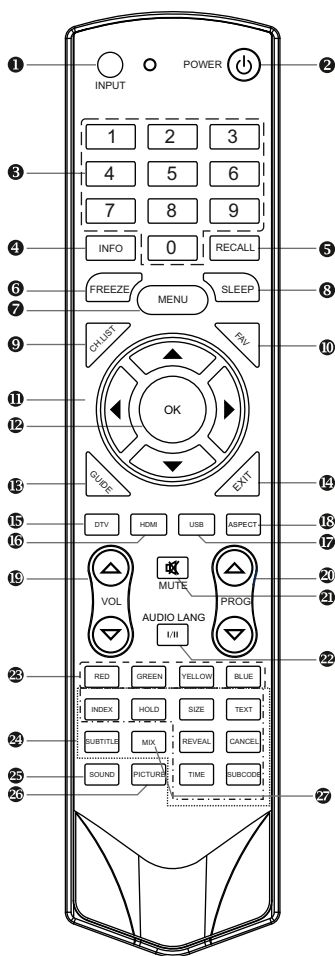

17. **USB**: Switch to USB mode directly or call the control menu in USB mode. Please see the details in "Digital Media Player" on Page37 to Page45.
18. **ASPECT**: Press this button to switch the screen mode.
19. **VOL Δ and VOL ∇** : Press these buttons to adjust TV volume.
20. **PROG Δ and PROG ∇** : Press these buttons to change channel upward or downward. In the teletext, these buttons are used to display the next page and previous page.
21. **MUTE**: Press this button to shut off sound of the TV, press again to restore TV sound.
22. **I/II Button/Audio Lang**: In ATV source, the button is used to set NICAM sound system. In DTV source, the button is used to set the audio language. In USB source, the button is used to make language soundtrack switch(video).
23. **Red/Green/Yellow/Blue Command**: These four buttons are used to request linked buttons with the current menu/page.
24. **Teletext buttons**: Detail operation please refer to "Teletext " in the next page.
25. **SOUND**: This button is used to select the sound mode.

Standard→Music→Movie→Sports→User



26. **PICTURE**: This button is used to adjust user picture mode, press this button repeatedly and select one of four settings.

 
Standard→Mild→Bright→User→Sports



27. **MIX**: Teletext buttons for mix function, please refer to page 14-15.

General Description

Teletext

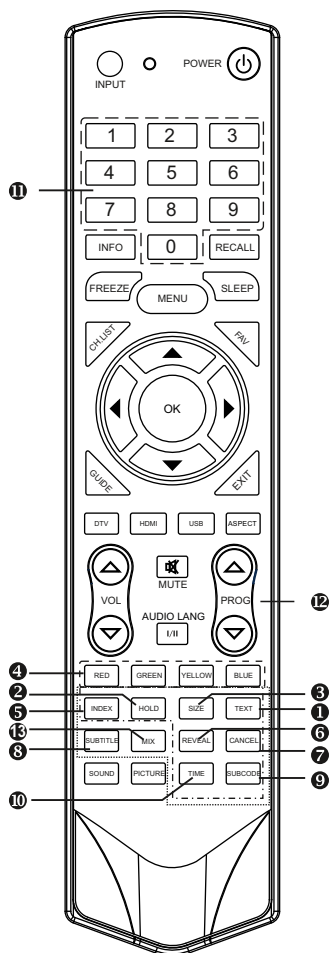

Note:

Buttons of TELETEXT are only available for teletext function, please check your product has teletext function.

Teletext is an information system broadcast by certain channels which be consulted like a newspaper. It also offers to subtitles for viewers with hearing problems or who are not familiar with the transmission language.

You can press these buttons to operate the teletext:

1 Text

Press TEXT button to enter or exit teletext mode.

2 Hold

Press HOLD button to toggle Hold function on or off. When Hold is switched on, the page acquisition is stopped. When Hold is switched off, the page acquisition is started.

3 Size

Press SIZE button one time to display the upper half of the screen in double height, press the SIZE button two times to display the lower half of the screen in double height, press three times to display the full screen in normal size.

4 Red/Green/Yellow/Blue Command

These four buttons are used for quick access to different pages as numbered at the bottom of the screen.

5 Index

 
Press INDEX button, then index page displays.

6 Reveal

Pressing this button will reveal any hidden data (answers to quizzes for example). Press the REVEAL button again to return to normal screen.

General Description

Teletext

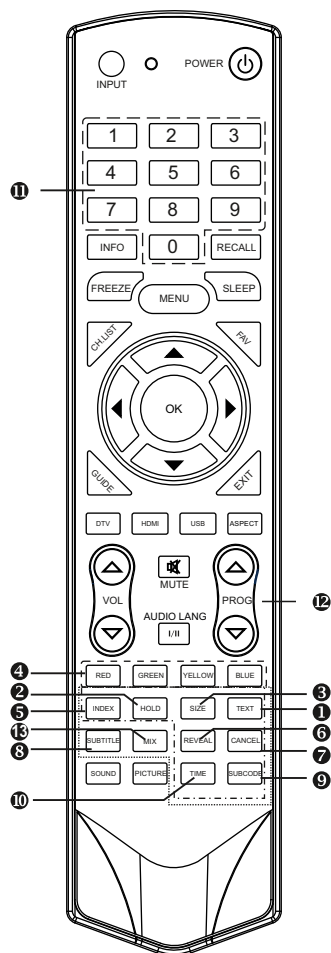

7 Cancel

The CANCEL button will exit from any Teletext on the display. Press CANCEL button again to exit Teletext and return to live TV broadcast.

8 Subtitle

Turning the Teletext subtitles on or off.

Subtitles is a separate mode with only a few buttons available. There will be no OSD visible other than the Teletext Subtitles.

In USB source, the button is used to make subtitle switch for video.

9 Subcode

Subcode mode gives the possibility to select certain subcode pages of a Teletext page.

Entry of digits within the range 0...9 for current subcode entry. If the digit completes the entry, a page request is started.

Press PROG△/ PROG▽ buttons to change the subcode pages.

10 Time

This button is used to show the time of the Teletext.

11 Digital buttons(0~9)

You can press them to enter the number of the Page required.

12 PROG△/PROG▽

You can press them to change page upward or downward.

13 Mix

Press MIX button, the teletext page changes transparent, TV content and teletext page content will display at the same time.

 
Press MIX button again to exit MIX mode.

General Description


Installing Batteries in the Remote Control

Installing Batteries



- 1** Open the battery compartment cover on the back side.

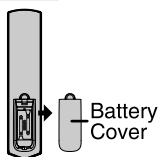

 - 2** Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.

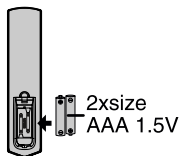

- 3** Closed the cover.

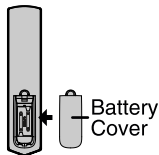  

- ✦ Point the remote towards the remote control sensor of the TV and use it within 8 meters.
- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:

 
- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

External Connection


Antenna connection

Antenna input impedance of this unit is 75ohm. VHF/UHF 75ohm coaxial cable can be connected to the antenna jack directly, if the antenna cable is 300ohm parallel flat feeder cable, you need to use the 300ohm/75ohm converter to connect the antenna cable to the antenna jack. For details Please refer to the following drawing.

Antennas with 300 Ω flat twins Leads

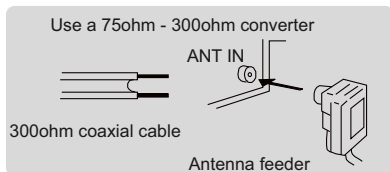


Antennas with 75 Ω Round Leads

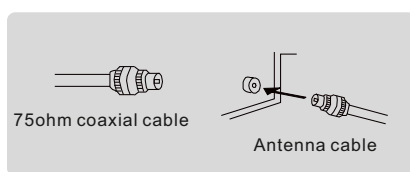 

External Connection

Connecting VCR

 These instructions assume that you have already connected your TV to an antenna or a cable TV system. Skip step 1 if you have not yet connected to an antenna or a cable system.

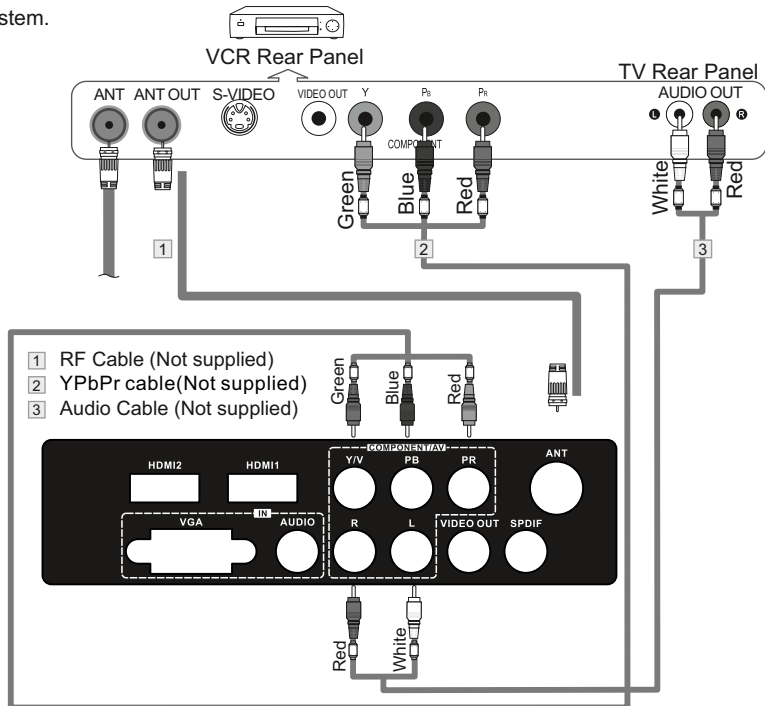

Follow the instructions in Viewing a VCR or Camcorder Tape to view your VCR tape. Each VCR has a different back panel configuration. When connecting a VCR, match the color of the connection terminal to the cable.

1. Unplug the cable or antenna from the back of the TV.
2. Connect the cable or antenna to the ANT IN terminal on the back of the VCR.
3. Connect an RF Cable between the ANT OUT terminal on the VCR and the ANT IN terminal on the TV.
4. Connect a Component Cable between the COMPONENT [Y, Pb, Pr] jacks on the DVD player and COMPONENT [Y, Pb, Pr] jack on the TV.
5. Connect Audio Cables between the AUDIO OUT jacks on the VCR and the AUDIO L and AUDIO R jacks on the TV.

Note: 1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.

2. When connecting an external device, match the color of the connection terminal to the cable.

External Connection

Connecting a Camcorder

The rear panel jacks on your TV make it easy to connect a camcorder to your TV. They allow you to view the camcorder tapes without using a VCR.

 
Each Camcorder has a different back panel configuration.

When connecting a Camcorder or DVD, match the color of the connection terminal to the cable.

1. Connect a Video Cable between the AV VIDEO jacks on the TV and the VIDEO OUT jack on the camcorder.
2. Connect Audio Cables between the AUDIO L and AUDIO R jacks on the TV and the AUDIO OUT jacks on the camcorder.
3. Connect a Video Cable between the component IN Y on the TV and the VIDEO OUT jack on the DVD.
4. Connect Audio Cables between the component IN AUDIO L and R jacks on the TV and the AUDIO OUT jack on the DVD.

Note:


1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
2. When connecting an external device, match the color of the connection terminal to the cable.

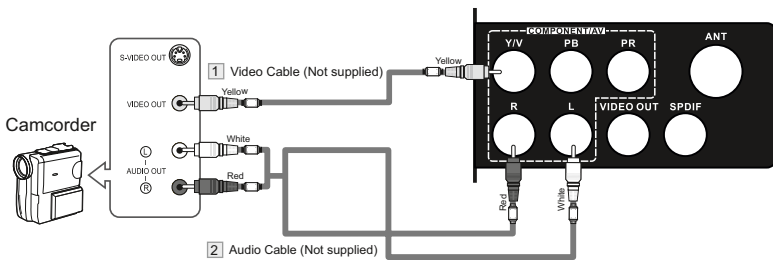

Connecting a DVD Player/Set-Top Box

Note:

 
1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
2. When connecting an external device, match the color of the connection terminal to the cable.

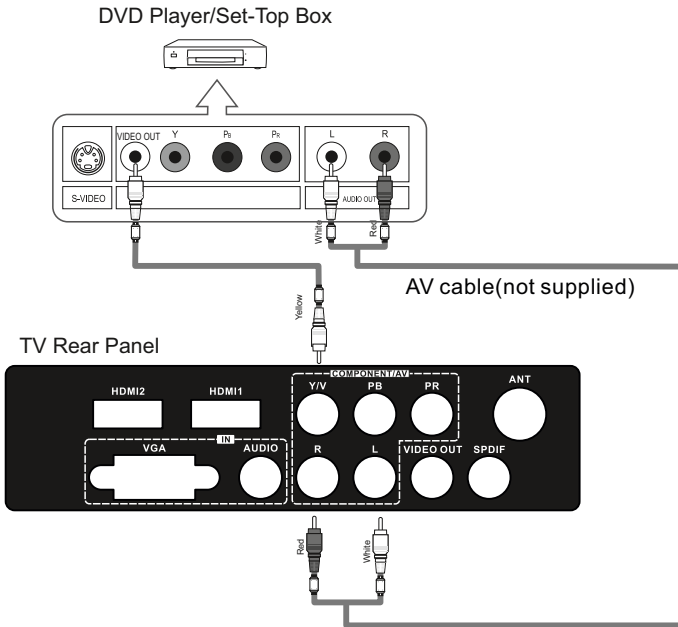

External Connection

Connecting a DVD Player/Set-Top Box via DVI

 This connection can only be made if there is a DVI Output connector on the external device.

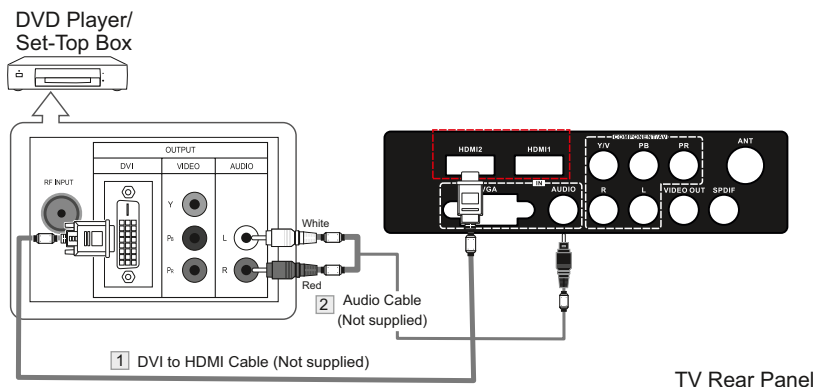

Each DVD player/STB has a different back panel configuration.

When connecting a DVD player/STB, match the color of the connection terminal to the cable.

1. Connect a DVI to HDMI Cable or DVI-HDMI Adapter between the HDMI 1 or HDMI 2 connector on the TV and the DVI connector on the DVD player/Set-Top Box.
2. Connect Audio Cables between the PC AUDIO IN jack on the TV and the AUDIO OUT jacks on the DVD player/Set-Top Box.

 
Note:

1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
2. When connecting an external device, match the color of the connection terminal to the cable.

External Connection

Connecting DVD Player/Set-Top Box via HDMI

This connection can only be made if there is a HDMI Output connector on the external device.

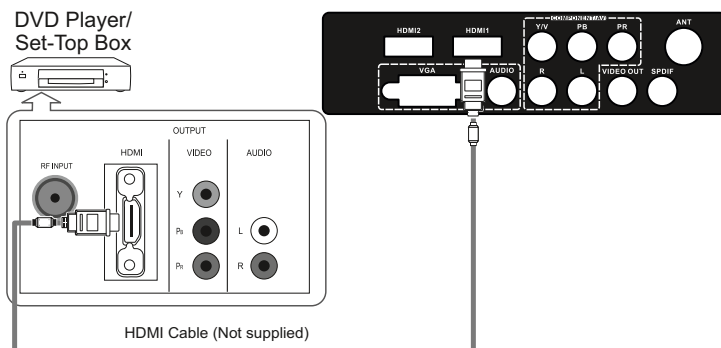

What is HDMI?

HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression.

Multimedia interface is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels).

The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP(High Bandwidth Digital Copy Protection) coding feature installed, and supports multi-channel digital audio.

Each DVD player/STB has a different back panel configuration.

1. Connect an HDMI Cable between the HDMI1 or HDMI2 connector on the TV and the HDMI connector on the DVD player/Set-Top Box.

Note:

1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
2. When connecting an external device, match the color of the connection terminal to the cable.

 
External Connection

Connecting Digital Audio System

The rear panel jacks on your TV make it easy to connect a Digital Audio System to your TV.

TV Rear Panel

Digital Audio System

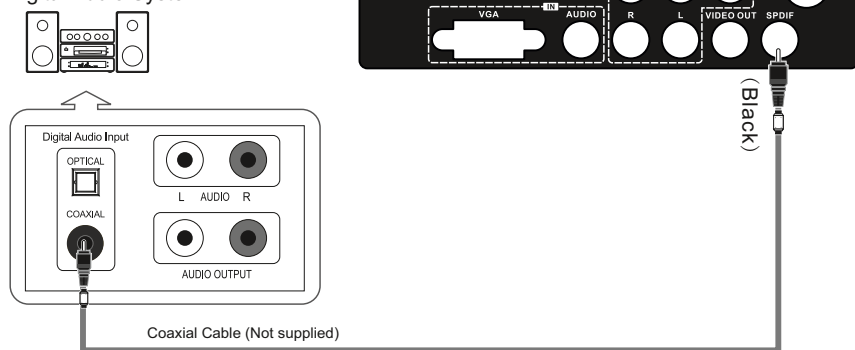


5.1 CH audio is possible when the TV is connected to an external device supporting 5.1 CH.

1. Connect an Coaxial Cable between the SPDIF jacks on the TV and the Digital Audio Input jacks on the Digital Audio System. When a Digital Audio System is connected to the SPDIF terminal: Decrease the gain (volume) of the TV, and adjust the volume level with the Digital Audio System's volume control.

External Connection

 Connecting PC

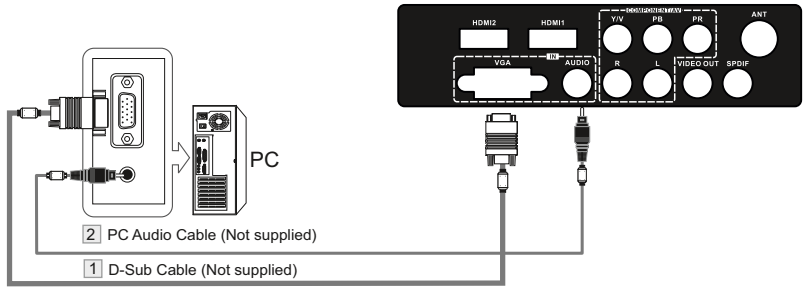

Each PC has a different back panel configuration.

1. Connect a D-Sub Cable between VGA/PC IN connector on the TV and the PC output connector on your computer.
2. Connect a PC Audio Cable between PC AUDIO IN jack on the TV and the Audio Out jack of the soundcard on your computer.

You should set PC software before you connect a PC to your TV (please refer to "PC Display" settings)

Note:

1. Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
2. When connecting an external device, match the color of the connection terminal to the cable.

Supporting signals

Input	Resolution		Vertical Frequency
PC/VGA	VGA	640x480	60Hz
			75Hz
	SVGA	800X600	60Hz
			75Hz
	XGA	1024X768	60Hz
			75Hz
	SXGA	1280X1024	60Hz
		1360X768	60Hz


Input	Resolution	Vertical Frequency
Component	480i	60Hz
	480p	60Hz
	576i	50Hz
	576p	50Hz
	720p	50Hz/60Hz
	1080i	50Hz/60Hz
	1080p	50Hz/60Hz
HDMI	480p	60Hz
	576p	50Hz
	720p	50Hz/60Hz
	1080i	50Hz/60Hz
	1080p	50Hz/60Hz
DVI-HDMI	640x480	60Hz
	800X600	60Hz
	1024X768	60Hz
	1280X1024	60Hz

Basic Operation

Turning the TV On and Off

1 *How to turn the TV on or off*

 1. Insert the power cord plug into a polarized AC outlet.
2. If TV is in standby mode, press **POWER** button on the remote control or Ψ button on the bottom panel of LED TV.
3. Normal picture will be displayed on the screen after 15 seconds. If no signal input, "No Signal" will be displayed on the screen.
4. If temporary POWER off is required, press **POWER** button on the remote control or Ψ button on the bottom panel.
5. If you want to completely switch off the power for this unit, unplug the power cord plug for this unit.
6. After switching off the unit, you should wait at least 5 seconds before switching on again.

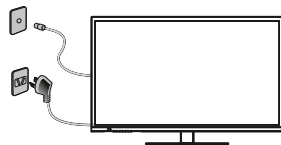

Status indication lamp

Red: In standby mode.

Green: In power on mode.

Auto power-off

If there is no signal, the TV will automatically enter standby mode after 10 minutes.

See 'Auto sleep' pg. 36 for more details.

 
Memory before turning TV off

The picture and sound settings and preset channels will be memorised at the point when the TV is turned off. When the TV is started up again it will work accordingly with these settings.

Menu operation

1 Input Setup

Press **INPUT** key on the remote control to enter "INPUT SOURCE" menu. There are nine options for you to select: DTV, ATV, AV, Component, PC, HDMI1, HDMI2 and USB1, USB2, use **▲/▼** key to move the cursor to the input you desired and press **OK** key to confirm.

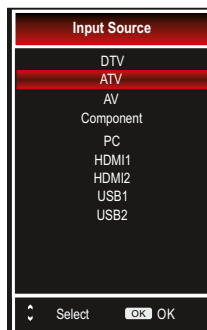

2 Channels Selection

There are four ways to select channel:

- 1) Using number keys, and **OK** keys on the remote control to select channel directly. To select channel 90, press **9** → **0** → **OK**.

When you use the number buttons, you can directly select channels that were either erased or not memorized.

- 2) Using **PROG** **▲/▼** key on the remote control or on your TV to select channel.

When you press the **PROG** **▲/▼** key, the TV changes channels in sequence. You will see all channels that the TV has memorized.

You will not see channels that were either erased or not memorized.

- 3) Press **RECALL** key to return to previous channel, press it again to return to current channel.

To quickly switch between two channels that are far apart, tune to one channel, then use the number keys to select the second channel. Then use the **RECALL** button to quickly alternate between them.

RECALL is not activated if no channel has been changed after TV turning on.

- 4) Select channels from "Channel List" or "Favorite Channels List".

Press **OK** key to select Channel.

3 Volume Adjustment and Mute Setup

Volume adjustment

Press **VOL** **▲/▼** key on the remote control or on the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using **VOL** **▲/▼** key:

- To increase the volume, press **VOL** **▲** key;
- To decrease the volume, press **VOL** **▼** key;



Mute

Press **MUTE** and the sound cuts off. The MUTE icon will appear in the lower-left corner of the screen.

To resume sound, press the **MUTE** button again, or simply press the **VOL** **▲** key.

Basic Operation

Menu operation

4 Current Channel Information

Press INFO key on the remote control to view current channel information, the indications of channel information are listed in the following table.

9	
DTV	576i
SD	DOLBY MPEG

THE SHAK	Nine Digital	Subtitle Age 11	10:47
Wednesday 17 Jun 2009	09:41	12:00	NEXT >
Fears Ahhhh, it's time to face your fears!! it's a scary day at The Shak with the theme of Fears-Eco_Curio.			

Press EXIT key on the remote control to exit this OSD.

5 GUIDE Menu

Press GUIDE key to enter "GUIDE" menu, the first line displays current channel number, channel name, event title and current time.

The following line displays all programs that will be played on this channel, press ▲/▼ key to select the program you desired.

PROGRAMME GUIDE

18 Jun 2010 14:00

DTV 9 Nine Digital
MALCOLM IN THE MIDDLE

DTV		
18 Jun 13:00-13:30	MALCOLM IN THE MIDDLE	
18 Jun 13:30-14:30	THE SHAK	
	No Information	
	No Information	
	No Information	
	No Information	
	No Information	

☐ Prev Day

☐ Next Day

☐ Schedule

☐ Reminder

INFO

INFO

OK

OK

EXIT

Exit

DTV EPG (Electronic Program Guide)

In DTV mode, press "GUIDE" button to enter the Electronic Program Disabled. (Disabled when there is no signal)

1. Electronic Program Guide information is provided by the broadcaster and displays scheduled programs for the week ahead (depending upon the broadcaster).
2. TV program of each channel is listed under the time axis. Press "◀▶" button to select the channel and press "▲/▼" button to highlight the program. The selected program's background colour will change to white. Press "INFO" button to view the detailed information. Press "OK" to select the desired channel.
3. Use the "Reminder"(blue) button to reserve programs. If the TV is in DTV mode, it will automatically turn to the reserved program at the scheduled time. Use "Schedule" (yellow) button to look up the reminder list.

Basic Operation

Menu operation

Prev. Day: If you press the red key on the remote controller, It will show Previous Day's programs.

Next Day: If you press the green key on the remote controller, It will show Next Day's programs.

Schedule: If you press the yellow key on the remote controller, It will show the reminder list.

Reminder: If you press the blue key on the remote controller, It will show a command window, and you can set the reserve programs.

 
6 Install Guide

When the TV is turned on for the first time, the Installation Guide will appear, it consists of 3 parts: OSD Language, Country, Channel Tuning.

1. Press ▲/▼ key to select OSD Language option, and press ◀/▶ key to change Language.
2. Press ▲/▼ key to select Country option, and press ◀/▶ key to change Country.
3. Press ▲/▼ key to select Channel Tuning option, and press "OK" or "▶" to start tuning.

If you want to exit, press EXIT button and select "Yes", then press OK button to exit

NOTE: Install guide will also appear the first time you turn on the TV after performing the Reset function.

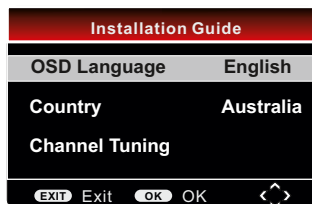

Menu system instruction

 
Picture

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select "Picture" option.
3. Press ▶ key to enter "Picture" submenu.
4. You can also press the **PICTURE** key on the remote control to select one of the picture settings.

Picture Mode

Your TV has five picture settings (Standard, Mild, Bright, User, Sports) that are preset at the factory. Only "User" mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness, Tint .

1. Press ▲/▼ key to select "Picture Mode" option.
2. Press ◀/▶ key to select one picture mode.

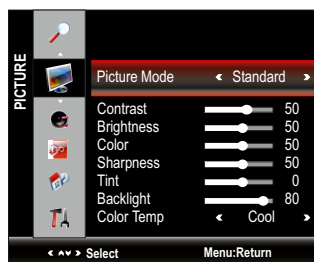

Menu system instruction

Picture

Standard: Selects the picture for optimum display in a normal environment.
Mild: Selects the picture for comfortable display in a dark room.
Bright: Selects the picture for high-definition in a bright room.
User: Select to view your favorite display settings (see User settings for PICTURE).
Sports: Selects the picture for high-definition in a bright room.

User settings for PICTURE (Contrast, Brightness, Color, Sharpness, Tint)

Your set has several settings which allow you to control picture quality.

1. Press ▲/▼ key to select a particular item.
2. Press ◀/▶ key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

Contrast: Adjusts the lightness and darkness between objects and the background.
Brightness: Adjusts the brightness of the picture.
Color: Adjusts the colors, making them lighter or darker.
Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.
Tint: Adjusts the color of objects, making them more red or green for a more natural look.
Tint can only be adjusted when signal is NTSC.

Adjusting the Backlight

You can change the brightness of the entire screen according to your preference.

1. Press ▲/▼ key to select "Backlight" option.
2. Press ◀/▶ key to select one backlight mode.

Backlight: Adjusts the brightness of the whole screen.

Adjusting the Color Temp

You can change the color of the entire screen according to your preference.

 
1. Press ▲/▼ key to select "Color Temp" option.
2. Press ◀/▶ key to select one color temp.

Standard: Keeps whites white.
Warm: Makes whites reddish.
Cool: Makes whites bluish.

Menu system instruction

Sound

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Sound" option.
3. Press **►** key to enter "Sound" submenu.
4. You can also press the **SOUND** key on the remote control to select one of the sound settings.

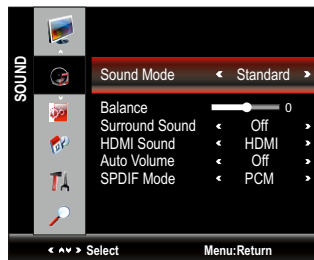

Sound Mode

You can select the type of special sound settings to be used when watching a given broadcast.

Your TV has five sound settings ("Standard", "Music", "Movie", "Sports", "User") that are preset at the factory.

 
1. Press **▲/▼** key to select "Sound Mode" option.
2. Press **◀/▶** key to select one sound mode.

- Standard: Selects the normal sound mode.
- Music: Provides clear and live sound for news.
- Movie: Provides live and full sound for movies.
- Sports: Emphasizes bass over other sounds.
- User: Selects your custom sound settings (See "User settings for Sound").

User setting for Sound

1. Press **▲/▼** key to select a particular item.
2. Press **◀/▶** key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

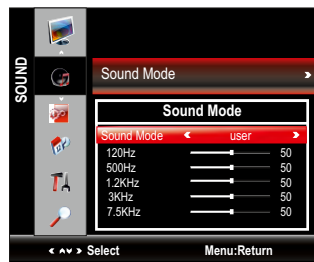

Sound

Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press ▲/▼ key to select "Balance" option.
2. Press ◀/▶ key to decrease or increase the value of the item.

Surround Sound

This is used to turn on surround sound to gain better sound effect.

1. Press ▲/▼ key to select "Surround sound" option.
2. Press ◀/▶ key to select "Surround" or "Off".

HDMI Sound

This option is only used in HDMI mode.

1. Press ▲/▼ key to select "HDMI Sound" option.
2. Press ◀/▶ key to select HDMI Sound mode, HDMI or PC.

Auto Volume

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. "Auto Volume" automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press ▲/▼ key to select "Auto Volume" option.
2. Press ◀/▶ key to select "On" or "Off".

SPDIF Mode

This is used to select "SPDIF Mode". This option is only used in HDMI/DTV mode.

1. Press ▲/▼ key to select "SPDIF Mode" option.
2. Press ◀/▶ key to select "RAW" or "PCM".

Menu system instruction

 
Channel

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Channel" option.
3. Press **▶** key to enter "Channel" submenu.

Auto Search

Press **▲/▼** key to select "Auto Search" option. Then press OK or **▶** key to start a notice window. In this notice window, you can select country in the "Country Selection" option and set "Tune Type" option. Press **▼** button to select "Start", and press OK button to search, then the searching interface will be on the screen as follows:


(If you want to exit, press **▲/◀▶** button to select "Cancel", and press OK button to exit.)

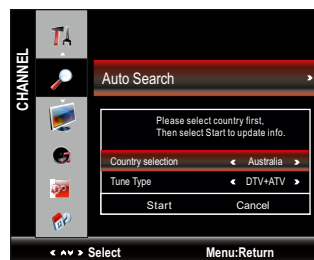

The number of searched channels will be shown on the screen. If you set "Tune Type" to "DTV+ATV", when the searching of ATV channels is over, TV will start to search DTV channels. When the whole searching is finished, all the channels will be stored in memory, and a message will appear on the screen as per the diagram on the right:

NOTE:

 
- 1) If you want to exit the ATV searching, you can press **MENU** button, then a confirmation message will appear on the screen.
- 2) To exit DTV searching, press the **MENU** button, a confirmation message will then appear on the screen.
- 3) If you want to exit the whole searching, you can press **EXIT** button.

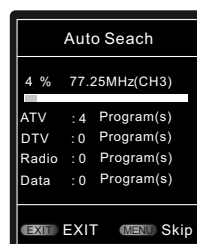

ATV Manual Search

In the ATV source, you can choose "ATV Manual Search" to enter "ATV Manual Search" menu.

 - ◆ Current CH: You can see the current channel number and you can press **◀/▶** button to choose the channel you want to modify.
- ◆ Color System: Select the "Color System" option, press **◀/▶** on the remote control or TV. The color system will be changed repeatedly in the below order.
PAL → SECAM
- ◆ Sound System: Select the "Sound System" option, press **◀/▶** on the remote control or TV. The sound system will be changed repeatedly in the below order.
BG → I → DK
- ◆ Search: you can use **▶** button to search channels from low frequency to high frequency and use **◀** button to search channels from high frequency to low frequency.
When you have searched a channel, the searching will be paused and you can press it again for other channels after you store the channel.
- ◆ Fine Tune: In case of unfavorable image or sound of TV program, you can use "Fine Tune".
- ◆ Skip: Select "Skip" option, "be changed" on the remote control or TV to switch, select "ON" to skip current program, select "OFF" to add the program into the program list.
- ◆ Frequency: You can see the frequency of the searched channels.

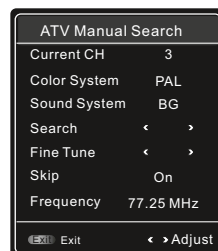

Menu system instruction

Channel

DTV Manual Search

In the DTV source, you can choose "DTV Manual Search" to enter "DTV Manual Search" menu.

You can use ◀▶ button to choose the channel number and press OK button to enter searching, and then the TV will store the DTV channel if there is a DTV signal present.

Program Edit

You can use ▲/▼ button to choose "Program Edit" and enter the menu, press the Red/Green/Yellow/Blue color button on the remote control to delete, rename, move and skip programs, also you can press FAV button to add to your favorite list.

- ♦ Delete: Choose the channel you want to delete and press RED button to delete it.
- ♦ Move: You can press ▲/▼ button to choose the channel in ATV mode you want to move and press YELLOW button to move it.
- ♦ Skip: You can press ▲/▼ button to choose the channel you want to skip and press BLUE button to skip it when you change channels.
- ♦ FAV: If you like the program of a channel, you can choose "FAV" button in the menu to add it to your favorite list and later you can press "FAV" button in the remote control to choose your favorite programs as soon as possible.
- ♦ Rename(green): Rename some program from program list in ATV mode you want to Rename. Press ▲/▼ button to select the program that need to be renamed, then press green button to enter rename state, and press ◀▶ button to select the letter that need to be edited, and press ▲/▼ button to select a new letter, repeat to rename the program.

 


Signal Information(Used only in DTV)

1. Press ▲/▼ key to select "Signal Information" option.
2. Press "OK" or ▶ key, you can see the information of the DTV channel.

NOTE: Signal Quality/Signal Strength (DTV Only):

Unlike analogue channels, which can vary in reception quality, digital channels must have perfect reception quality or you will not receive them at all. So, unlike analogue channels, you are not able fine tune a digital channel. If the signal strength indicates that the signal is weak, a possible solution is to adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.

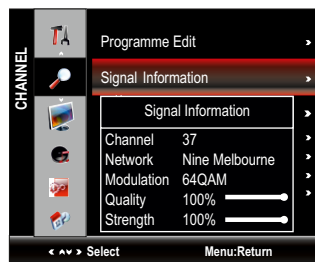

Menu system instruction

Time

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Time" option.
3. Press **►** key to enter "Time" submenu.

Off/On Time

In "Off Time" item, press **►** button or OK button to enter the submenu, set the day & time to turn off the TV set.

In "On Time" item, press **►** button or OK button to enter the submenu, set the time to turn on the TV set, when the TV set is in the standby mode. You can also choose which day to control your TV set in a week.

Sleep Timer

1. Press **▲/▼** key to select "Sleep Timer" option.
2. Press **◀/▶** key repeatedly until the desired time appears (Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.

Notes: When the time is less than 60 seconds, remind information will be displayed on the screen. Press any key button to cancel timer function.

 
 
 
 
Clock

You can modify the time of your TV set, but when you switch to DTV program, the "Clock" is decided by the signal from your antenna.

Time Zone

You can choose it to modify your time zone in the TV set.

1. Press **▲/▼** key to select "Time Zone" option.
2. Press **◀/▶** key to select time zone.

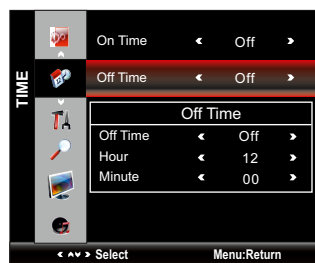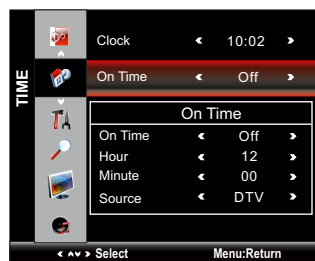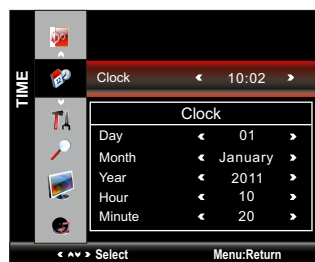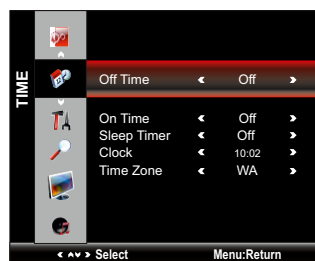

Menu system instruction

Option

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Option" option.
3. Press **▶** key to enter "Option" submenu.

OSD Setting

You can modify the OSD set to suit your user preferences.

1. Press **▲/▼** key to select "OSD Setting" option.
2. Press **OK** or **▶** key to display the OSD setting menu.
OSD Language: select the proper language
OSD Time : Set the preferred amount of time for the OSD to be displayed on the screen.



Window Adjust

This option is only used when PC mode has signal.

1. Press **▲/▼** key to select "Window" option.
2. Press **OK** or **▶** key to display the "Window" menu.



- ♦Auto Adjust: Allows you to set the TV to self-adjust to the incoming PC-RGB video signal. The fine, coarse and position values are adjusted automatically
- ♦H-Position: Set horizontal position of picture.
- ♦V-Position: Set vertical position of picture.
- ♦Clock/Phase: Remove or reduce picture noise.

 
Lock

The lock feature requires a Password to be entered before any settings can be changed.

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key and select "Lock" under the "Option" menu.
3. Press **OK** or **▶** key to enter "Lock" submenu, "Enter Password" menu will appear, enter your 4-digit password to enter "Lock" submenu (the default and universal password is 0000, the almighty password is 1980).

Lock System

1. Press **▲/▼** key to select "Lock System" option.
2. Press **◀/▶** key to select "On" or "Off".

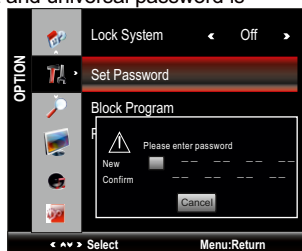

Menu system instruction

Option

Set Password

1. Press ▲/▼ key to select "Set Password" option.
2. Enter your 4-digit password to enter "Change Password" submenu. Choose any 4-digits for your new password and enter them. As soon as the 4 digits are entered, the cursor will skip to "Confirm Password" item, re-enter the same 4 digits, and your new password has been memorized.

Block Program

1. Press ▲/▼ key to select "Block Program" option.
 2. Press OK or ► key to enter Block Program list.
- In the program list, use Green key to lock or unlock the program. Once the program is locked and Lock System is on, password is needed to enter it.

Parental Guidance

This option only used in DTV mode.

1. Press ▲/▼ key to select "Parental Guidance" option.
2. Press ◀/▶ key to select the lock level of the Parental Guidance: off, 4-18

Reset

 
Select the "Reset" option and press OK or ► key to display a confirm box, and select "Yes" or "No".

Note: Please use the "Reset" option with caution as it will return all settings and channel memories to factory default.

Software Update(USB)

1. Press ▲/▼ key to select "Software Update(USB)" option.
2. Press OK or ► key to software update process.

Note: In the software update process, do not turn off the power.

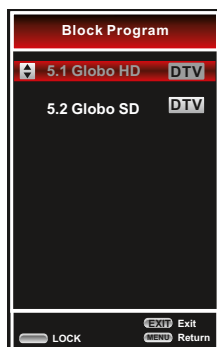


Menu system instruction

Function

Motion

After selecting the "Motion" option, press ENTER or ► key to enter the submenu.

 
1. Detail Enhance: Press ◀/▶ key to select the Detail Enhance: Off/On. The detail will be stronger when it is in "On" mode.
2. Noise Reduction: Press ◀/▶ key to select the Noise Reduction mode: Low/Middle/High/Default/Off. You can select the right mode to match the pictures.
(No effect for DVI and VGA.)

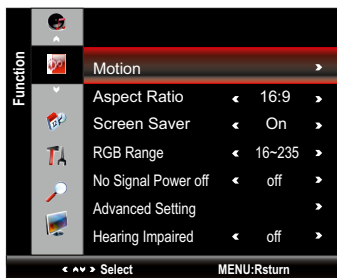

Aspect Ratio

You can select the picture size which best corresponds to your viewing requirement.

 1. Press ▲/▼ key to select "Aspect Ratio" option.
2. Press ◀/▶ key to set the scale mode.
You can also press "Aspect" key on the remote control to select one of the scale modes. Each source has different scale modes. (16:9, 4:3, Panorama, Movie, Subtitle, Full view, Full DeFinition)

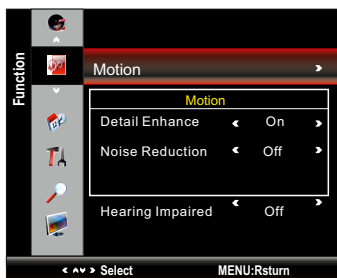

Screen Saver

 
This option is only used in ATV mode.

1. Press ▲/▼ key to select "Screen Save" option.
2. Press ◀/▶ to choose on or off.

RGB Range

Change the brightness and saturation for a better picture.

1. Press ▲/▼ key to select "RGB Range" option.
2. Press ◀/▶ key to select "16~235" or "0~255".
Note: only available in HDMI mode, please select the appropriate setting according to the DVD Player/STB.

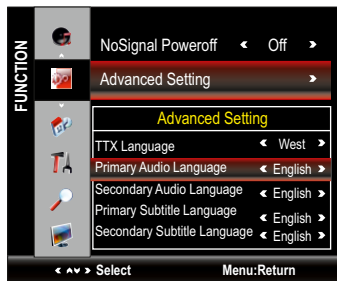

No Signal Power Off

1. Press ▲/▼ key to select "No Signal Power Off" option.
2. Press ◀/▶ key to set it "On" or "Off". When "No Signal Power Off" is turned on, the TV set will be Power Off 15 seconds later in PC-RGB mode, 10 minutes later if there is no signal, in other input sources, not working in USB.

Advanced Setting

Press ▲/▼ key to select "Advanced Setting", then press OK or ► key to display the "Advanced Setting" menu.

Menu system instruction

Function

TTX Language

- 1.Press▲/▼key to select "TTX Language" option.
- 2.Press◀/▶key to set TTX Language.

Primary Audio Language

- 1.Press▲/▼key to select "Primary Audio Language" option.
- 2.Press◀/▶key to set Primary Audio Language.

Secondary Audio Language

- 1.Press▲/▼key to select "Secondary Audio Language" option.
- 2.Press◀/▶key to set Secondary Audio Language.

Primary Subtitle Language

- 1.Press▲/▼key to select "Primary Subtitle Language" option.
- 2.Press◀/▶key to set Primary Subtitle Language.

Secondary Subtitle Language

- 1.Press▲/▼key to select "Secondary Subtitle Language" option.
- 2.Press◀/▶key to set Secondary Subtitle Language.

Hearing Impaired

Specific Hearing Impaired subtitles can be activated subject to availability from broadcaster.

Note: Only available in DTV mode.

Digital Media Player

Introduction

This TV is embedded with one USB port digital media player. It can find devices that support USB1.1/2.0, including flash disk, USB hard disk and digital camera. It supports functions as: Display pictures, Play music files, Play video files, Display text files.

Note: please do not remove the cable during the data transfer. It may cause problems for the system.

Data	Format
Picture	JPG, JPEG, PNG, BMP
Music	MP3, WAV, AAC, DOLBY AC3
Video	MPG, MPEG, MP4, MOV, MKV
Text	TXT

 
Device and File Management

Initialization Interface

Into the USB channel, the interface shown in Figure 1. If no inserted U disk, the system will be prompted to insert the USB device, while the lower right corner screen displays "No Device" message. When you insert a U disk, select the first letter located in the C drive, shown in Figure 2. The corresponding buttons as follows:

Left/Right keys: Select the drive letter.

OK key: to enter the selected letter.

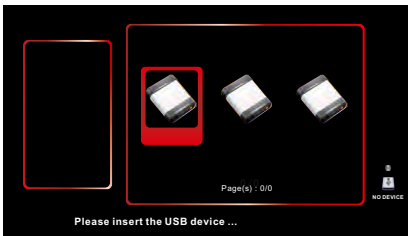

<Figure 1>



<Figure 2>

1.Photo

Features: Browse and play under the specified path (the default path is specified in the current disk, set the photo interface methods please refer to the specified path: path - Set) picture.

Content: Browse and play all the images under the specified path.


Photos View Shown in Figure 3

Features: Displays thumbnails of all images path, bmp and png format does not support thumbnails.

Key operation: Up, Down, Left, Right: Option key to switch up and down.

OK Key: selected in the entry photo option on the left, the switch to the image preview area, was selected in the image preview area in the right section, then play image files

 Exit Key: selected in the entry in the right image preview area, select the entries to switch back to the left side of photo options, the selected option in the entry on the left picture, the switch back to the USB interface initialization.

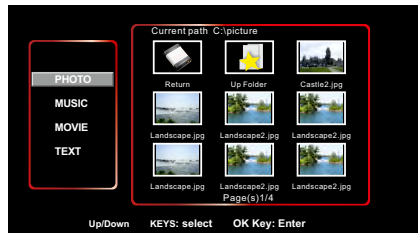

<Figure 3>

Photo Play interface (Shown in Figure 4)

Key operation:

The following key: Play on a picture / next picture

 
Left, Right: Reverse / Rotate the image clockwise

Confirmation: play / pause image

Exit: Exit the pictures to return to photo browsing interface

Menu key: enter the playback control menu.

Shown as Figure 5

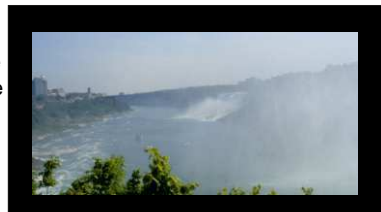

<Figure 4>

Digital Media Player

Play Control menu

Key operation

Left, Right: Select Options

OK button: the selected function key to enter the selected Living the secondary function key menu.

Play

Play / Pause: Play / Pause Picture.

Prev: Play on a picture.

Next: Play the next picture.

Rotate: Rotate the image counter-clockwise along. (Shown as Figure 6)

Proportion

1. Zoom out: shrink image (1/2,1/4)

2. Zoom in: enlarge images (1x,2x,4x,8x)

3. Move View: Mobile pictures. This option is only in the picture is magnified when you have over the role of screen size, press the arrow keys to move a picture, press the EXIT key to return to the previous menu, as shown in Figure 7.

 
PlayMode: Shown as Figure 8

1. Filmstrip: loop all the pictures.


2. Single: Repeat the current picture.

Music: Shown as Figure 9


Set to open when the user is playing the most recently played directory's songs. If the user is set to open when not playing a song recently, the default entry to play current directory's music
Stop : Exit Slideshow

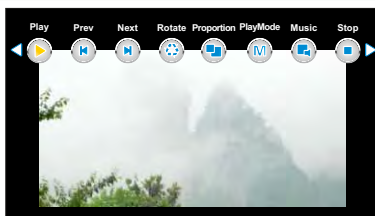


<Figure 5>

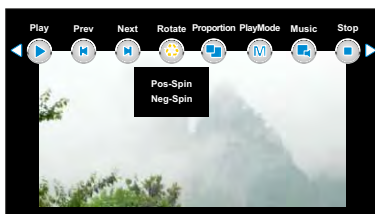 


<Figure 6>

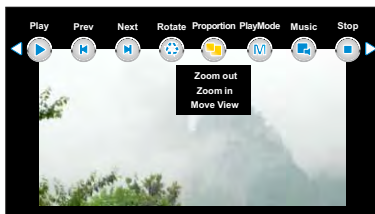 

<Figure 7>

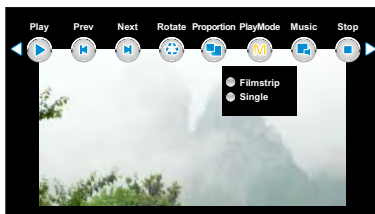 

<Figure 8>

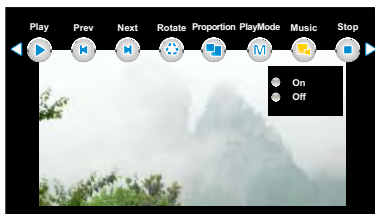 

<Figure 9>

Digital Media Player

USB support character

Playlist: Show is playing and will play the image file. Shown as Figure 10 Up, Down keys: select the image file. Enter button: Play the selected picture file. Left, Right keys: Exit playlist, and select other options. Exit button: Exit Playlists.

Info: Display the name of the picture playback, resolution, size and date.
(Shown as Figure 11)

2. Music

Features: browse and play the specified path music files.

Content: Displays the playback of music files under the specified path.

Browse Music

Content: Displays the music files.
(Show as Figure 12)

Key operation:

Arrow keys: up and down between the different options about the switch.
OK key: selected in the last entry in the left side of music options, the switch to music preview area; selected entries in the preview area on the right music, then play music files.
Exit: selection preview in the music entry in the right area, select the entries to switch back to the left side of music options; selected entries in the music option on the left, the switch back to the USB interface initialization

PLAY Music

 
Music player interface Shown as Figure 13
Action:

Left, Right: rewind / fast forward
Upper and lower key: on a / the next one
OK button: Play / Pause music
Exit: exit the music player interface, return to music browsing interface
Menu key: enter the playback control menu.
(Shown as Figure 14)


Play Control

Key operation:


Left, Right: Select Options
Confirm the key: the selected function key to enter the selected features live secondary menu items.
Exit: exit the playback control menu

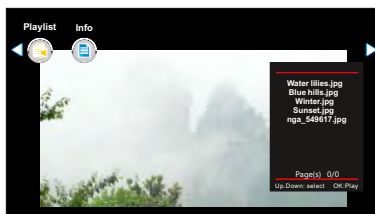


<Figure 10>

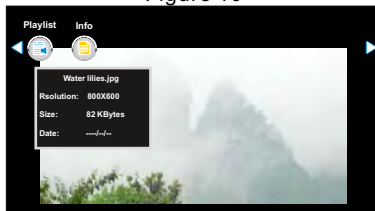 


<Figure 11>

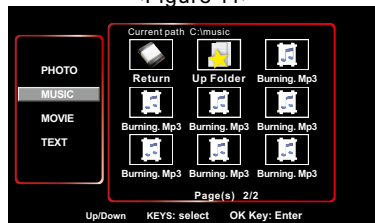 

<Figure 12>

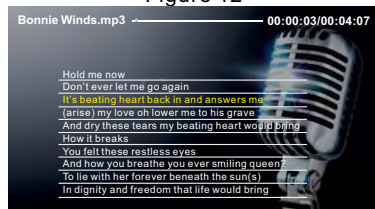 

<Figure 13>

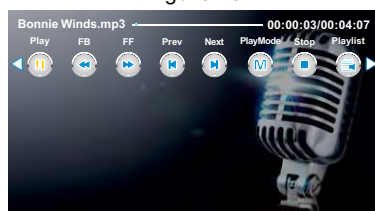 

<Figure 14>

USB support character

Function:

Play / Pause: Play / Pause the music
FB: Fast back playing (2x,4x,8x,16x)
FF: Fast forward playing (2x,4x,8x,16x)
Prev: Play previous music
Next: Play next music

Play mode:

- 1.ByOrder: Play music as order
- 2.Single: Repeat single music
- 3.PlayLoop: Play all the music in order loop.

Stop:

Playlist:

Show is playing and will play music files.
Shown as Figure 16

Key operation:

Up, Down keys: Select the music file
OK button: Play the selected music files
Left, Right keys: Exit playlist, and select other options
Exit button: Exit Playlists

Info: Display the name of music, album name, title, stream, author, sampling year.
(Shown as Figure 17)

3. MOVIE

Features: browse and play video files under the specified path.

Content: Displays the playback video files under the specified path.

Shown in Figure 18

Video view

 
Content: The specified path to all the video files displayed as thumbnails

Key operation:


Arrow keys: up and down in the switch between different options.

OK key: selected in the entry in the video options on the left, the switch to the video preview area; selected to the entry in the right side of the video preview area, then play the video file.


Exit: In the video preview on the right in the entry area, select the entries to switch back to the left of the video options. Selected to the entry in the video options on the left, the switch back to the USB interface initialization.

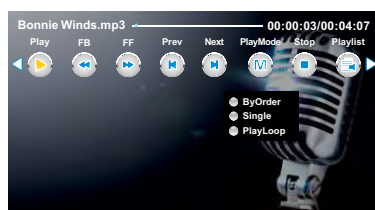


<Figure 15>

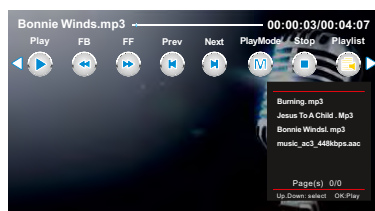 

<Figure 16>

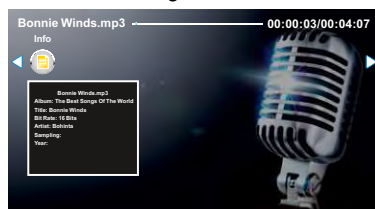 

<Figure 17>

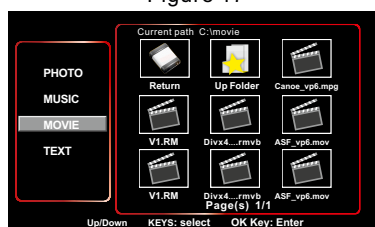 

<Figure 18>

USB support character

PLAY Video

Video player interface Shown as Figure 19

Action:

Left, Right: rewind / fast forward

Upper and lower key: on a / the next one

Exit: exit the video player interface, return to video browsing interface.

Menu key: enter the playback control menu.
Shown as Figure 20

Play Control

Key operation:

Left, Right: Select Options

Confirm the key: the selected function key to enter the selected. Features live secondary menu items

Exit: exit the playback control menu

Function:

Play / Pause: Play / Pause the video

FB: Fast back playing (2x,4x,8x,16x)

FF: Fast forward playing (2x,4x,8x,16x)

Prev: Play previous video

Next: play next video.

Switch: Shown as Figure 21

1. Subtitles switch: switch the currently playing video titles, this option the user can switch the video comes with different titles, select the OFF option, the subtitles will not be displayed.

2. Track switch: switch the currently playing video tracks.

3. Goto Time: Choose a specific time period the video play the video.

Shown in Figure 22.

Proportion:

Select the display ratio video playback.

Shown in Figure 23.

 
1.16 : 9

2. 4 : 3


Source of the film will switch to automatic mode by default.




<Figure 19>

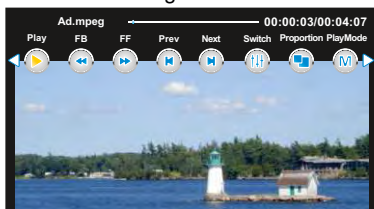


<Figure 20>

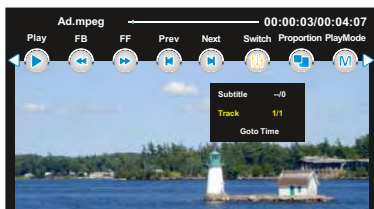 

<Figure 21>

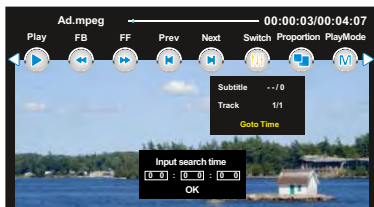 

<Figure 22>

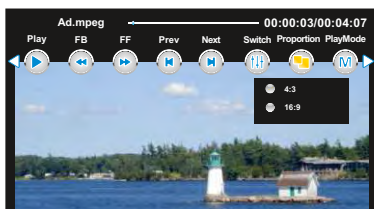 

<Figure 23>

USB support character

Play Mode: Shown as Figure 24

- 1.ByOrder: Play video as order.
- 2.Single: Repeat single video.
- 3.PlayLoop: Play all the video in order loop.

A->B: A to B repeat playback of video between points

Set A: Select the starting point.

Shown as Figure 25.

Set B: Select the destination point .

Shown as Figure 26.

None: Cancel A-> B play and resume normal playback. As shown in Figure 27.

Slow: Play Slowly.(2x,4x,8x,16x)

Stepping: Play just one picture each time the user clicks.

Stop:Exit the video play

Playlist: Show the videos files being playing and will be played.

Shown as Figure 28

Key Operation

 
Up, Down keys: Select the video file

OK button: Play the selected video files


Left, Right keys: Exit playlist, and select other options.

Exit button: Exit Playlists


Info: Shows the name of the video is playing, resolution, audio track, subtitles, program, title, version, chapters. Shown as Figure 29.

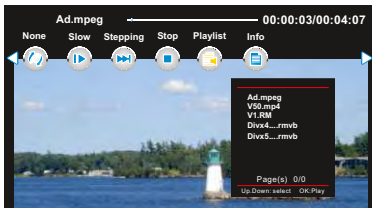


<Figure 24>

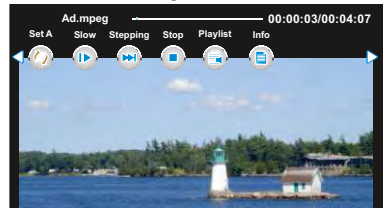 


<Figure 25>

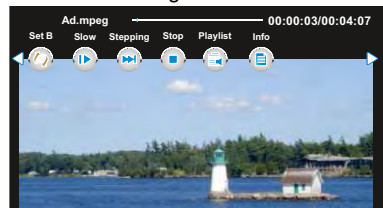 


<Figure 26>

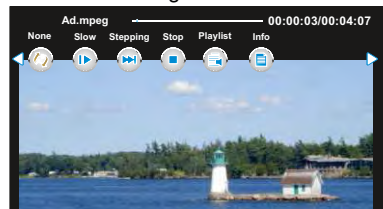 

<Figure 27>

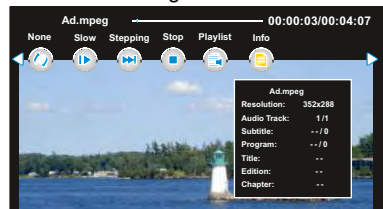 

<Figure 28>

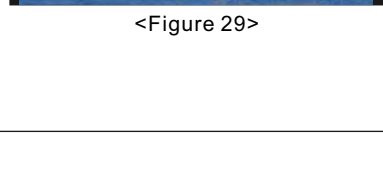 

<Figure 29>

Digital Media Player

USB support character

4.Text

Features: browse and play text files under the specified path.

Content: Displays the playback text files under the specified path.

Shown in Figure 30

Document view

Content: The specified path to all the text files displayed as thumbnails.

Key operation:

Arrow keys: up and down in the switch between different options.

OK key: selected in the entry in the text options on the left, the switch to the video preview area; selected to the entry in the right side of the text preview area, then play the text file.

Exit: In the video preview on the right in the entry area, select the entries to switch back to the left of the text options. Selected to the entry in the text options on the left, the switch back to the USB interface initialization.

Document Reading

The Document Reading interface: Shown as Figure 31.

Key operation: Up key: Previous Page;

Down key: Next Page.

Left, right keys: Previous file, Next file.

Exit key: Return to the text interface.

Menu key: Enter the playback control menu.

As shown in Figure 32.

Play Control menu

Key operation

Left, Right: Select Options

Enter button: the selected function key to enter the selected

Living the secondary function key menu.

Exit button: Exit Play control menu.

Function

Prev Page: Show previous page.

Next Page: Show next page.

 
Prev: Show previous document.

Next: Show next document.


Stop: Exit document reading

Music: Shown as Figure 33


When set to open, play music at the same time.

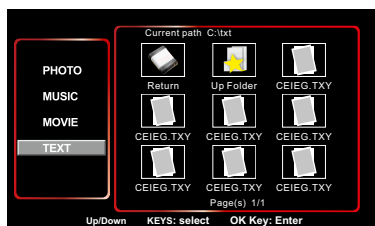


<Figure 30>

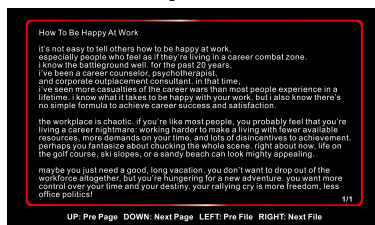 

<Figure 31>

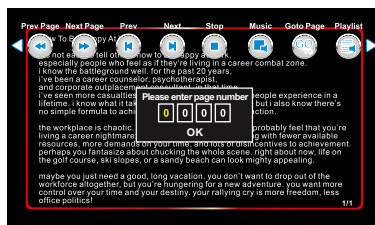 

<Figure 32>

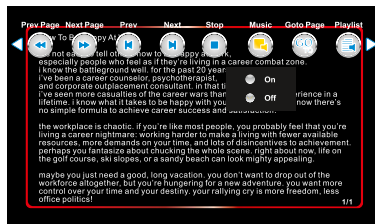 

<Figure 33>

USB support character

Goto Page: Select this feature, the pop-up dialog box jump page, the user can enter the page number to view the page, select Enter option, and enter the designated page, click Exit to return to playback control menu.

 
Shown as Figure 32.

Playlist: displays text files can be played.


Shown as Figure 34;

Info: Show the name, size of the text playing.

As shown in Figure 35.

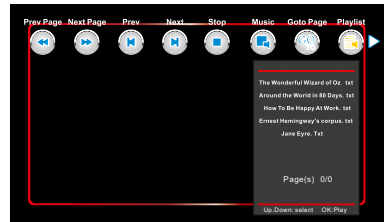

<Figure 34>

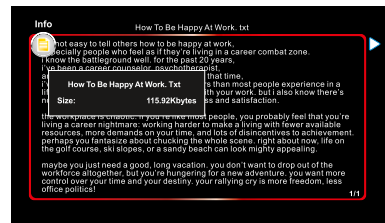 

<Figure 35>

Troubleshooting

If you have any problem, check the countermeasures for each symptom listed below. The following symptoms may have caused by inappropriate adjustment rather than actual malfunction of the unit. If the trouble persists, contact the service center.

Symptoms	Possible solutions
No power	Please check the power cord is plug in. Unplug the power cord and plug it after 60 seconds and restart the TV.
No picture	Please check antenna connection. Station may experience problems, please tune to another station. Please adjust the settings of contrast and brightness.
Good picture but no sound	Please increase the volume. Please check TV is under mute mode, press MUTE button on the remote control. Please check sound settings.
Good sound but abnormal color or no picture	Please check the antenna connection.
No remote control	Batteries of remote control may have exhausted, if necessary, please change the batteries. Clean the remote control lens. The distance between LED TV and remote control should be within 8m.
Full screen flickering under VGA	V-HEIGHT value may be set too big, restart computer and enter safe mode, then set monitor parameters to correct value according to adjustment description.
Horizontal stripes under VGA	Sample phase may be deflected, adjust phase according to picture position.
Colored dots may be present on the screen	This product is the high resolution LED display device and a few cell defects can occur in the manufacture of the LED. Several colored dots visible on the screen would be acceptable. in line with other LED manufacturers and would not mean that the LED is faulty. We hope you will understand that it could not be changed or refunded.

Reference

Picture defects and the reason



Snowy Picture

Snowy picture is usually due to weak signal. Adjust antenna or install an antenna amplifier.



Double Image or Ghosts

Double images are usually caused by reflections from tall buildings. Adjust the direction of the antenna or raise it.



Radio Wave Interference

Wave patterns are moving on the screen, which are usually caused by nearby radio transmitters or short-wave receiving equipment.



High Temperature Electrothermal Interference

 
Diagonal or herringbone patterns appear on the screen or part of picture is missing. This is probably caused by high temperature electrothermal equipment in a nearby hospital.

Accessories

Please make sure the following items are included with your LED TV. If any items are missing, contact your dealer.



Remote Control



Owner' s
Instructions



RECKE INDUSTRIES LIMITED
www.reckestyle.com