

# RECKE

— Quality First —

## ELECTRIC KETTLE

**KT-X5** | PREMIUM  
SERIES

1.6L 2200w



# USER MANUAL

RECKE INDUSTRIES LIMITED  
[www.reckestyle.com](http://www.reckestyle.com)



## TABLE OF CONTENTS

|                                            |           |
|--------------------------------------------|-----------|
| <b>IMPORTANT SAFETY INSTRUCTIONS .....</b> | <b>5</b>  |
| <b>INTRODUCTION .....</b>                  | <b>7</b>  |
| Features .....                             | 7         |
| Specifications .....                       | 7         |
| Main Parts .....                           | 8         |
| <b>GETTING STARTED .....</b>               | <b>9</b>  |
| BOIL .....                                 | 9         |
| KEEP WARM function .....                   | 10        |
| <b>MAINTENANCE .....</b>                   | <b>11</b> |
| <b>TROUBLESHOOTING .....</b>               | <b>12</b> |
| <b>WARRANTY TERMS .....</b>                | <b>12</b> |

**Dear Customer,**

Thank you for choosing RECKE product.

RECKE stands for:

- Quality
- Innovation
- Comfort

We hope that you will enjoy using RECKE KT-X5 touch panel electric kettle and consider purchasing other products offered by RECKE.

For proper handling and care of the RECKE kettle, we recommend reading this User Manual, which contains important operating, safety, and maintenance instructions.

For any further information about RECKE and its products, please visit our website: **[www.reckestyle.com](http://www.reckestyle.com)**

The KT-X5 Premium Series smart kettle makes ordinary boiling a luxury. By a single touch, you can set the desired water temperature and keep it warm. RECKE KT-X5 model perfectly combines quality, convenience and innovation.

The KT-X5 will ideally fit almost any kitchen due to its harmony between modern design and classic shape. For Premium Series, we have counted every point to bring you user convenience and product quality.

2 Years Warranty is our confidence in our product durability.

## IMPORTANT SAFETY INSTRUCTIONS


1. Please read the USER MANUAL carefully before operating the product.
2. It is recommended to use 10A power outlet and not to operate any other high power appliance on the same power source to avoid short-circuit and overload.
3. Do not fill the kettle while it is on the base. If liquid is spilt on the base unit (stand), dry it before connecting to the power outlet.
4. Do not leave the appliance unattended while in use. Especially, when children are nearby.
5. The electric kettle must be operated on a flat surface.  
Do not place the appliance near gas and electric ovens or on the top of other electric appliances.
6. Use the handle to avoid touching hot surfaces. Do not remove the lid while boiling.
7. Do not use the kettle to heat/boil anything other than water.  
Do not fill above the "MAX" level indication.  
Do not operate the kettle if water is below minimum level.
8. Place the power cord with reserve length from base unit (stand) to the power outlet.  
Do not let the cord touch the hot surfaces or hang over the edge.
9. Do not immerse any part of the appliance in water or any other liquid. Do not use your appliance with an extension cable unless it has been checked and tested by a qualified technician.  
Always use your appliance with a power outlet of the voltage marked on the rating label.
10. In case of power cord damage or any malfunctions, the product should be submitted for repair to an authorized service center or qualified personnel only.

**NOTE:** If the kettle is overfilled, boiling water may spill over. The kettle is only to be used with the provided base unit (stand).

11. Always unplug the kettle from the power outlet in the following conditions:  
While kettle is empty;  
While filling water;  
While not in use;  
Before cleaning or moving the kettle;
12. Contact our customer service representatives for examination and repairing. Never repair the appliance by yourself.

**WARNING:** To avoid fire or electric shock, do not remove the bottom cover of the body or the base unit by yourself.

13. Do not use any other base units other than the one that is supplied.  
The manufacturer does not recommend using any other accessories, as it may cause electric shock, fire or personal injuries.
14. Do not insert any objects into slots or holes of the kettle.
15. This appliance is for indoor use only.
16. The kettle can be operated by children aged 8 years or above, people with reduced physical, sensory or mental capabilities if they are instructed how to use the appliance safely.
17. Do not let the children to play with the appliance.

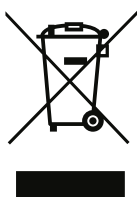

### **DISPOSAL OF THE APPLIANCE**

After the implementation of the European Directive 2002/ 96/ EU in the national legal system, the following conditions apply:  
Electrical and electronic devices may not be disposed of with domestic waste.

Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale.

This symbol on the product on the user manual or the package indicates that a product is subject to these regulations.

By recycling, reusing the materials or utilizing old devices, you are making an important contribution to protect our Planet.

## INTRODUCTION


### FEATURES

- MODERN Design
- TEMPERATURE CONTROL Touch Panel
- KEEP WARM function
- STAINLESS STEEL Body with Protection Layer
- 2 YEARS Warranty
- High-Quality Thermostat
- RAPID Boiling
- STRIX Controller
- BOIL-DRY Protection
- STEAM CONTROL Switch
- EASY Visible Level Gauge

### SPECIFICATIONS

|                    |                      |
|--------------------|----------------------|
| Model              | KT-X5                |
| Rated Voltage      | 220 - 240V 50 ~ 60Hz |
| Rated Power        | 1850 - 2200 W        |
| Capacity           | 1.6 L                |
| Dimensions (LxWxH) | 234x166x266 mm       |
| Weight             | 1.38 kg              |

## MAIN PARTS

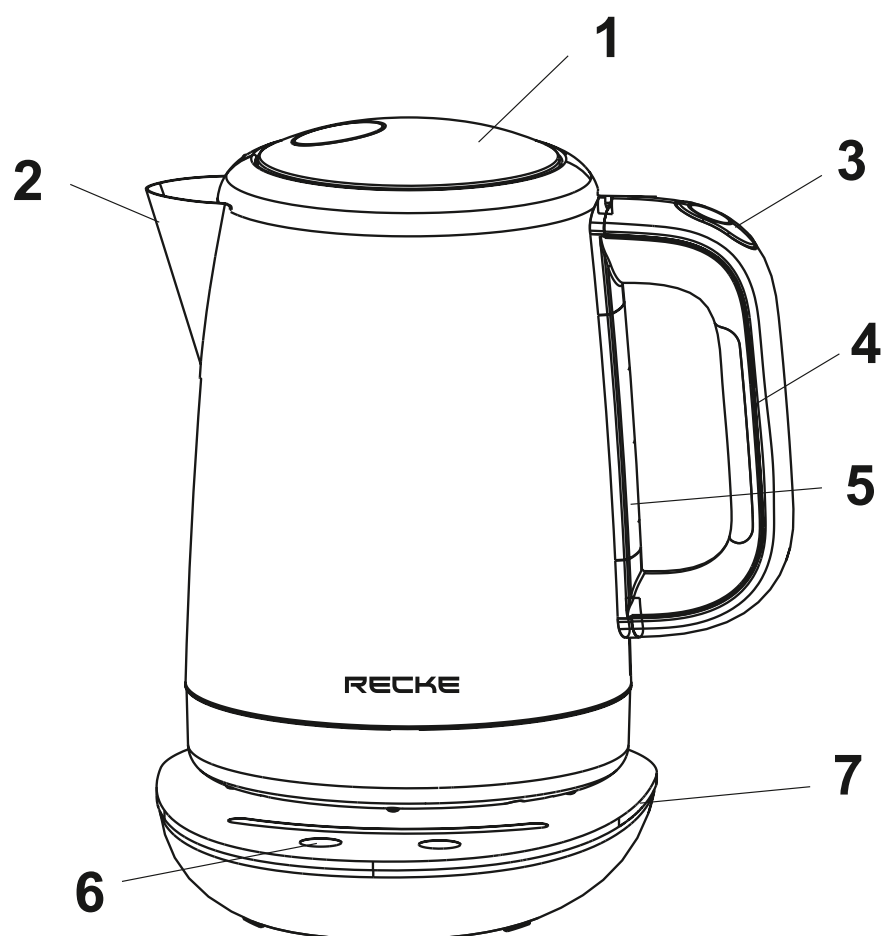

- 1. Lid
- 2. Spout
- 3. Lid release button
- 4. Handle
- 5. Water gauge
- 6. Switch/Indicator Light
- 7. Base unit (Stand)

## GETTING STARTED

For the first time use, it is recommended to fill the kettle with fresh tap water to the maximum level mark, boil it and spill out (do not drink) to clear the kettle from any tiny particles.

The kettle is equipped with BOIL-DRY Protection, so if you accidentally switch on the kettle with no water inside, it will switch off automatically.

In this case, let the appliance cool down for an hour and it will be ready to use.

## BOIL

- To open the lid, press the lid release button.
- Remove the kettle from the stand before filling with water. Water level must be between MIN and MAX marks on the water gauge.
- Close the lid and place the kettle back on the stand.
- Connect the plug into a power outlet (220~240V AC).
- Select the desired temperature by sliding the Touch Temperature Control strip (between 40°C and 100°C).  
The LED indicator will lighten up the strip to the selected temperature.  
Note: Water boils at a temperature of 100°C.
- Touch the START button .
- If KEEP WARM function was not enabled, the kettle will automatically switch off and beep 3 times once the water has reached the desired temperature.  
The indicator light will turn off.
- Lift the kettle from the stand.

## KEEP WARM FUNCTION

This function allows you to keep the water warmed up at the selected temperature.

- Repeat the procedure as described in “BOIL” until you select the temperature.
- As you have selected the temperature, touch the KEEP WARM button .
- Then the water will be heated and kept at the selected temperature.
- You can remove the kettle from the stand at any time and as you place it back on the stand, it will continue KEEP WARM function.
- While KEEP WARM is on touch the KEEP WARM button  to turn off the function. The kettle will turn off automatically if it was not operated during 2 hours.
- While boiling, you can switch between BOIL and KEEP WARM modes by touching KEEP WARM button .
- Touch the START button  to switch off the kettle.

## MAINTENANCE

To prolong the kettle's service life, we recommend cleaning the kettle from mineral deposits regularly.

Always unplug from the kettle from power outlet and let it cool down before cleaning.

Do not use chemical, steel wool or abrasive cleaners to clean the kettle body, as these would damage the surface.

## CLEANING TIPS

1. Fill the kettle with 0.5 L white vinegar, add water and let it stand for 1 hour;
2. Spill the solution out and wipe the kettle with a damp cloth;
3. Fill the kettle with tap water, boil it and spill out. Repeat the procedure one more time and the kettle will be ready to use;
4. The body surface of the kettle may be wiped with a damp cloth and polished with a soft dry cloth;
5. Open the lid and pull the filter upwards to remove. Wash with tap water and dry thoroughly. Attach it to its previous position.

## TROUBLESHOOTING

| Malfunctions                                       | Possible reason                                            | Solution                                                                                                    |
|----------------------------------------------------|------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Kettle doesn't turn on<br>(indicator light is off) | No power                                                   | Check the power outlet by plugging another appliance. If there is no power, try plugging to another outlet. |
| Kettle turns off too soon                          | Mineral deposits have covered the heating element          | Clean the heating element as stated in "Maintenance" chapter.                                               |
| Kettle turns off after several seconds             | Water level is too low<br>(Boil dry protection is engaged) | Fill in the water (minimum level is 0.5 L)                                                                  |

## WARRANTY TERMS

This product is subject to 2 years warranty from the date of purchase. During this warranty period, the manufacturer is obliged to provide the warranty coverage at Authorized Service Centers by seeking to repair the hardware, replace the defected parts, or replace the product itself. This warranty is valid only if the seal of the shop and the salesperson signature are on the warranty book, confirming the original date of purchase. This warranty is recognized only if the product was used in strict compliance with the instructions outlined in the User Manual, not repaired or disassembled, and not damaged through misuse. It also assumes no missing accessories. The warranty does not cover the wear during daily usage of both the appliance and the consumables (filters, bulbs, rubber seals, etc.).



RECKE INDUSTRIES LIMITED  
[www.reckestyle.com](http://www.reckestyle.com)