

RECKE

— Quality First —

MICROWAVE OVEN

MW-X2

25L 1450W



USER MANUAL

RECKE INDUSTRIES LIMITED
www.reckestyle.com

TABLE OF CONTENTS

Introduction.....	4
Precautions to avoid microwave energy exposure.....	6
Important safety information.....	7
Grounding Instructions.....	9
 Features and technical specifications.....	 10
• Main parts.....	10
• Accessories.....	11
• Technical specifications.....	11
 Installation Instructions.....	 12
• Before using your microwave oven.....	12
• Turntable installation.....	12
• Installation of your microwave oven.....	13
 Operating Instructions.....	 14
 Kitchen cookware guide.....	 22
• Materials and utensils could be used in a microwave oven.....	22
• Materials and utensils to be avoided in a microwave oven.....	23
 Microwave oven troubleshooting.....	 23
Cleaning and Maintenance.....	24
Warranty Terms.....	25

INTRODUCTION

Dear Customer,

Thank you for choosing RECKE product.

RECKE is the brand focused on high standards of quality, reliability, and modern design with continuous customer care in mind.

We hope that you will enjoy using microwave oven and consider purchasing other products offered by RECKE.

For proper handling and care of the RECKE MW-X2 microwave ovens we recommend reading this User Manual, which contains important operation, safety, and maintenance instructions.

For any further information about RECKE and its products, please visit our website:

www.reckestyle.com

The microwave oven is an essential appliance used in everyday life by nearly everyone. A proper kitchen may not be complete unless it is equipped with a microwave oven. After all, everyone wants to minimize their time spent in the kitchen and to facilitate that, the RECKE microwave ovens are ready to help.

When it comes to heating or reheating food, these microwave ovens can do it all. They can also defrost and prepare food, such as stew meat or vegetables, and even warm your baby's bottled milk. In addition, they can boil potatoes and sausages, prepare hot sandwiches, a variety of cereals and your favorite desserts. With RECKE microwave ovens you will always be fully prepared to meet unexpected guests in your house by serving a variety of hot snacks and being able to make hot sandwiches and other culinary delights.

All of this is possible, thanks to new modern technologies, including "smart" microwaves, which represent the latest innovation in high-quality modern and spectacular design.

While developing the models Premium Series microwave ovens, we paid special attention to their appearance and design. Thus, the main feature of these microwaves, which include mirror coating on the front window, will immediately draw the viewer to the interesting and unusual design of these new stylish appliances.

It is worth mentioning that control panels in both microwaves are easy-to-use and anybody can operate the ovens without any sort of instructions!

The proposed models have many pre-set functions and programs including: defrosting by time/weight of the product, automatic cooking programs grill, combination cooking, child lock, rapid reheat, inquiring function, kitchen timer, as well as a device equipped with a clock.

For the microwave ovens with grill, it can provide you with a perfect crispy layer for your meat and hearty bread. It will also please those who love hot sandwiches and toasts.

These smart and modern microwaves skillfully combine all of the latest advanced technologies. As such, each of these can be considered a perfect addition to any kitchen.

PRECAUTIONS TO AVOID MICROWAVE ENERGY EXPOSURE

1. Do not attempt to operate the oven with the door open and do not open the door while the oven is on without stopping cooking since this can result in harmful exposure to microwave energy. It is important not to tamper the safety interlocks.
2. Do not place any object between the oven front face and the door.
3. Do not allow soil or cleaner residue to accumulate on sealing surfaces.
4. The oven should be regularly cleaned.

WARNING: Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that the door is not bent and the glass is not broken, that the hinges and latches are not broken or loose and that the door seals and sealing surfaces are clean and undamaged.

NOTE! The oven should not be adjusted or repaired by no one other than properly qualified service personnel.

IMPORTANT SAFETY INFORMATION



IMPORTANT NOTE!

Follow the instructions below to avoid injuring yourself or others as well as damaging your personal property.

WARNING - To reduce the risk of burns, electric shock, fire, injury, or exposure to excessive microwave energy:

- Read all instructions before using this appliance.
- Read and follow the specific **“Precautions to avoid microwave exposure”** found above.
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Appliance to be used in accordance with its intended purpose. Any other use, especially misuse, can lead to potential injuries.
- Please keep electric connectors of microwave oven away from humidity and liquids, as it may malfunction the microwave oven, as well as the user may get severe electric shock.
- Microwave oven should be regularly cleaned after each operation in accordance with cleaning instructions, please refer to **“Cleaning and maintenance”** chapter. Failure to maintain the oven in a clean condition can affect the life of the appliance and possibly result in a hazardous situation.
- Microwave oven heating element surface is subject to residual heat after use. Do not touch heating element surface right after cooking process is done. Allow the appliance to cool thoroughly.
- If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- Keep cord away from heated surfaces.
- Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged.
- This equipment, including power cord, must be serviced **ONLY** by qualified service personnel.
- Install or locate this equipment **ONLY** in accordance with the installation instructions in this manual.
- Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and **SHOULD NOT** be HEATED in this oven.
- Do not store this microwave oven outdoors. Do not use the microwave oven near water - for example, near a kitchen sink, on a wet basement, near a swimming pool, or similar locations.

- The rear surface of appliance shall be placed against a wall.
- The microwave oven shall not be placed in a cabinet (bad ventilated area).
- The temperature of accessible surfaces may be high when the appliance is operating.
- DO NOT cover the ventilation slots with cloths or paper.
- Make sure the appliance has sufficient ventilation.
- The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
- Always use the accessories included with this appliance. The use of third-party accessories may damage the appliance and void the warranty.
- Microwave heating of beverages can result in delayed eruptive boiling; therefore, care has to be taken when handling the container.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- Avoid touching heating elements inside the oven.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not use a steam cleaner to clean the microwave oven.

NOTE: Only use the temperature probe recommended for this oven (for appliances having a facility to use a temperature-sensing probe).

To reduce the risk of fire in the oven cavity:

- Do not overcook food. Carefully attend appliance if paper, plastic or other combustible materials are placed inside the oven to facilitate cooking and remove wire twist-ties from paper or plastic bags before placing bags in oven.
- If a fire occurs, keep the door closed and unplug the unit.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
- Care should be taken when using paper, plastic, wooden or other combustible materials in the oven as they can catch fire.
- The microwave should not be left unattended when in use.
- Only use utensils that are suitable for microwave use.
- Liquid or other food must not be heated in sealed containers since they are able to explode.
- Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.

GROUNDING INSTRUCTIONS

ATTENTION! To avoid risk of electrical shock or death, this oven must be grounded.

Do not disassemble the appliance.

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.


WARNING: Improper use of the grounding plug can result in a risk of electrical shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded.

Short cord purpose


1. A short power-supply cord is provided to reduce risks of injuring yourself from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if you exercise caution during use.
3. If a longer cord is used please note the following:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the counter top where it can be pulled on by children or tripped over unintentionally.

FEATURES AND TECHNICAL SPECIFICATIONS

Main Parts

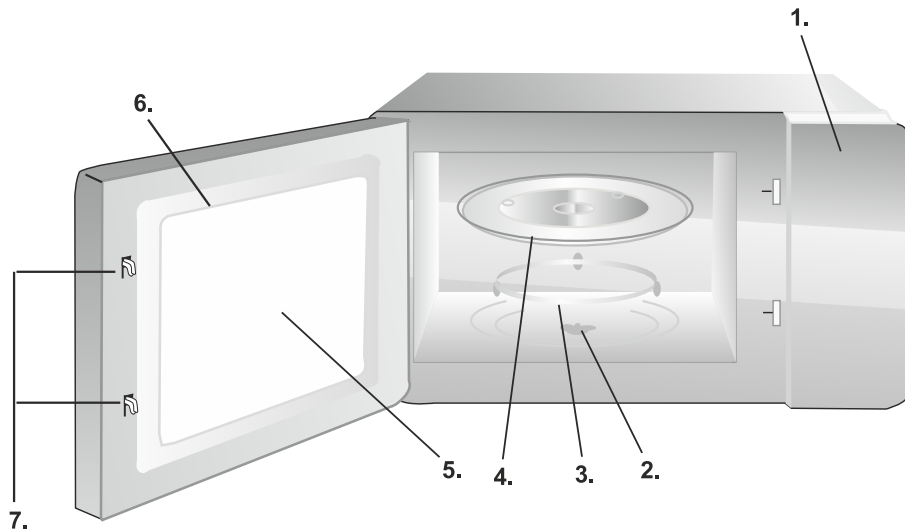

- 1 – Control Panel
- 2 – Turntable shaft
- 3 – Turntable ring
- 4 – Glass (turntable) tray
- 5 – Window
- 6 – Door
- 7 – Locks

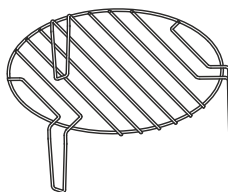

The grill rack must be used when grilling food and should be placed on top of the glass tray.

ACCESSORIES

Microwave oven	1 unit
Glass tray	1 unit
Turntable ring	1 unit
Grill rack	1 unit
User Manual	1 unit
Warranty Book	1 unit

TECHNICAL SPECIFICATIONS

Model	MW-X2
Rated Voltage	230V ~ 50 Hz
Rated Input Power	1450 W
Rated Output Power	900 W
Capacity	25 L
Turntable Diameter	315 mm
Dimensions	513 x 405 x 307 mm
Weight	14.7 kg

INSTALLATION INSTRUCTIONS

Before using your microwave oven


Remove all materials from the carton and oven cavity.

The box should contain:

- 1 x Microwave oven
- 1 x Glass tray
- 1 x Turntable ring
- 1 x Grill Rack
- 1 x User Manual
- 1 x Warranty Book

Please refer to your dealer in case if any of the mentioned objects is missing.

Turntable Installation

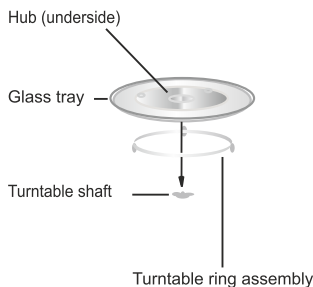


1. Never place the glass tray upside down. The glass tray should never be restricted.
2. Do not operate the oven without the glass tray and the turntable ring.
3. All food and containers of food should be placed on the glass tray for cooking.
4. If the glass tray or turntable ring assembly cracks or breaks, contact the authorized service center.

ATTENTION! Remove all packing material and accessories. Examine the oven for any damage such as dents or a broken door. Do not install the oven if it appears to be damaged. Remove any protective film found on the microwave oven surface.

NOTE: Do NOT remove the light brown cover that is attached to the oven cavity to protect the magnetron.

Installation of your microwave oven

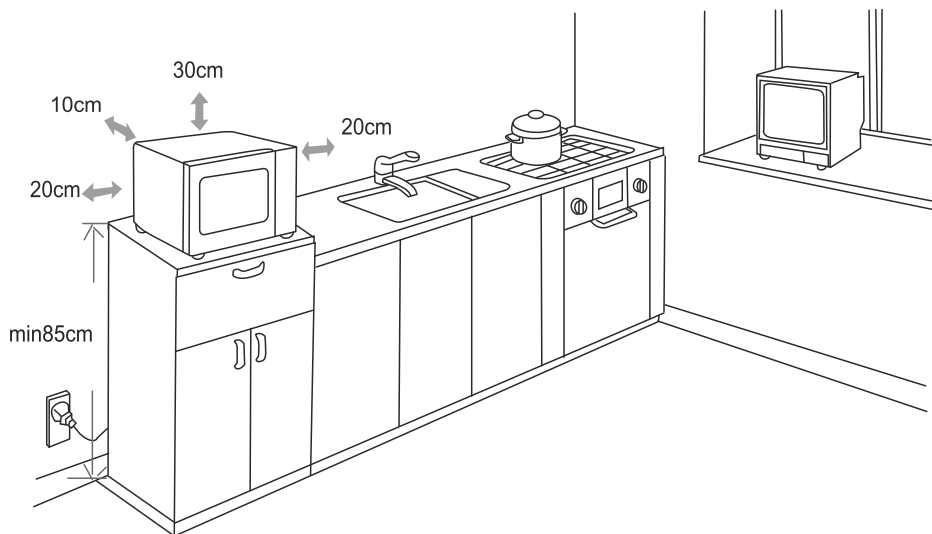

1. Place an oven on a flat surface. There should be enough open space for ventilation.
2. The minimum installation height is 85 cm from the ground.
3. The rear surface of the appliance should be placed against the wall, no closer than 10 cm.
Leave the 30 cm space above the oven.
4. Do not remove the leg stands from the oven.
5. Do not block/obstruct/cover the ventilation holes.
6. To avoid radio signal interference, place the oven as far as possible from TVs and radios.
7. Plug in the oven into a standard power outlet. Make sure that the voltage and the frequency are same as stated on rating label.

WARNING: Do not install the oven near other heat-producing appliances. If installed near or over a heat source, the oven could be damaged and the Warranty would be void.

OPERATING INSTRUCTIONS

1. Setting the clock

1. When the microwave oven is plugged into an outlet, the oven will display **"0:00"** and an audible signal will sound once.
2. Press the **"Clock/Kitchen Timer"** **"Часы/Таймер"** button once, the hour figures will flash.
3. Press the number keys and enter the current time. For example, time is 12:10 now, please press "1, 2, 1, 0"
4. Press the **"Clock/Kitchen Timer"** **"Часы/Таймер"** button to finish the clock setting procedure. The ":" will flash and the time will light up.

NOTE: 1) If the clock is not set, it will not be active when you turn on the microwave oven.
2) By pressing the **"Stop/Clear"** **"Стоп/Сброс"** button you can cancel or reset previous settings.

2. Microwave cooking

1. Press **"Time cook"** **"Время приготовления"** once, the screen will display "00:00".
2. Press number keys to input the cooking time. The maximum cooking time is 99 minutes and 99 seconds.
3. Press **"Power"** **"Мощность"** once, the screen will display "PL10". the default power is 100% power. Now you can press number keys to adjust the power level.
4. Press **"START/+30Sec."** **"СТАРТ/+30 сек"** to start cooking.

Example: If you want to use 50% microwave power to cook for 15 minutes, you can operate the oven using the following steps:

- Press **"Time Cook"** **"Время приготовления"** once. The oven display will indicate "00:00"
- Press "1", "5", "0", "0" in order.
- Press **"Power"** **"Мощность"** once, then press "5" to select 50% microwave power.
- Press **"START/+30Sec."** **"СТАРТ/+30 сек"** to start cooking.

Note:

If the **"Stop/Cancel"** **"Стоп/Сброс"** button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting " automatically.

If **"PL0"** selected, the oven will work with fan for no power. You can use this level to remove the odour of the oven.

During microwave cooking, **"Power"** **"Мощность"** button can be pressed to change the power you need. After pressing **"Power"** button current power flashes for 3 seconds, you can press number button to change the power. The oven will work with the selected power for the rest time.

Microwave Power Chart

Microwave power level	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

3. Grill and Combi cooking

Press the **"Grill/Combo"** **"Гриль/Комбо"** button once to choose the grill function, the screen will display "G-1".

Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds. Example: to set 12 minutes 50 seconds press "1", "2", "5", "0" in order.

Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start cooking. The cooking time counts down.

Note: If half the grill time passes, the oven pauses and gives sound signal twice. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** to continue cooking. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to continue cooking. If there is no operation in 1 minute, the oven will continue working and beep once.

To cook in Combo mode press **"Grill/Combo"** **"Гриль/Комбо"** button 2 or 3 times to choose "Combination 1" or "Combination 2", screen will display "C-1" or "C-2" respectively.

Set the cooking time, maximum cooking time is 99 minutes and 99 seconds.

Example: to set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.

Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start cooking. The cooking time counts down.

No. of times to press on the "Grill/Combo" button	Display	Microwave power level	Grill power level
1	G-1	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%

4. Rapid reheat

1. In standby mode press **"START/+30 Sec"** **"СТАРТ/+30 сек"** to cook with 100% power from 1 to 6 minutes by pressing number keys 1 to 6. Maximum cooking time is 99 minutes and 99 seconds.
2. In standby model Rapid Reheat at 100% power with 30 seconds cooking time can be started by pressing **"START/+30 Sec"** **"СТАРТ/+30 сек"**. Each press on this button will increase cooking time by 30 seconds.
3. To cook at full microwave power, press **"Time Cook"** **"Время приготовления"** button, select cooking time and press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button.

5. Defrost by weight

1. Press the **"Weight/Time Defrost"** **"Разморозка по весу/времени"** button once, the screen will display **"dEF1"**.
2. Press numerical buttons to input weight to be defrosted. Input the weight ranged between 100-2000g.
3. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start defrosting and remaining cooking time will be displayed.

6. Defrost by time

1. Press **"Weight/Time Defrost"** **"Разморозка по весу/времени"** button twice, the screen will display **"dEF2"**.
2. Press numerical buttons to input defrosting time. The effective time range is 00:01 - 99:99.
3. Default microwave power level is 30%. If you want to change the power level, press **"Power"** **"Мощность"** once and the screen will display **"PL3"**, then press the numerical buttons to set desired power level.
4. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start defrosting and remaining cooking time will be displayed.

7. Auto menu

Auto menu chart

Menu	Unit of measure	Display
Popcorn	50g	50
	100g	100
Potato	230g	1
	460g	2
	690g	3
Pizza	100g	100
	200g	200
	400g	400
Vegetable	150g	150
	350g	350
	500g	500
Beverage	1 cup (120ml)	1
	2 cups (240ml)	2
	3 cups (360ml)	3
Meat: press "Meat" button once Press "Meat" button two times Press "Menu" button three times		
	Chicken menu:	CHIC
	400g	400
	600g	600
	800g	800
	1000g	1000
	1200g	1200
	Beef menu:	BEEF
	300g	300
	500g	500
	700g	700
	900g	900
	1100g	1100
	Mutton menu:	PO
	150g	150
	300g	300
	450g	450
	600g	600
	750g	750

1. Press desired auto program button (Popcorn/Potato/Pizza/Vegetables/Beverage) repeatedly until desired value/number appears on display. For **"Meat"** **"Мясо"** program you can select between 3 different types of meat - chicken, beef or mutton. Press **"Meat"** **"Мясо"** button to activate this cooking program, if you press it once you will activate Chicken menu, if you press two times - you activate Beef menu and if you press three times Mutton menu gets activated. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to confirm the menu. Then press **"Meat"** **"Мясо"** button repeatedly to select required value/number
2. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start the cooking. Upon program completion device will give sound notification.

8.Dinner plate (weight)

1. Press **"Dinner plate"** **"Бек"** repeatedly until desired value appears on display: "250" , "350", "500" grams.

For example, if you press **"Dinner plate"** **"Бек"** button once "250" appears on display.

2. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start the cooking. Upon program completion device will give sound notification

9.Multi stage cooking

Maximum 2 stages can be set for cooking. First stage can be defrosting and second stage is cooking.

Note: Automatic cooking programs do not work in multi stage cooking mode.

Example:

To cook with 80% microwave power for 5 minutes and 60% microwave power for 10 minutes follow below steps:

1. Press **"Time cook"** **"Время приготовления"** button once, then press "5", "0", "0" to set the cooking time.
2. Press **"Power"** **"Мощность"** button once, then press "8" to select 80% microwave power.
3. Press **"Time cook"** **"Время приготовления"** once, then press "1", "0", "0", "0" to set the cooking time.
4. Press **"Power"** **"Мощность"** button once, then press "6" to select 60% microwave power.
5. Press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to start the cooking.

10. Memory function

1. Press **"0/Memory"** **"0/Память"** to select memory mode to save 1, 2 or 3 procedures. The screen will display 1, 2 or 3 respectively.
2. If the procedure has been set, press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to use it. If not, continue to set the procedure. Maximum 2 stages can be set.
3. Once the setting is done press **"START/+30 Sec"** **"СТАРТ/+30 сек"** to save settings. If you press **"START/+30 sec"** **"СТАРТ/+30 сек"** once again, the cooking process will start.

Example: to set the procedure as memory 2 to cook food with 80% microwave power for 3 minutes and 20 seconds follow below steps:

- in standby mode press **"0/Memory"** **"0/Память"** button twice, "2" will be displayed on screen.
 - press **"Time cook"** **"Время приготовления"** once, then press "3", "2", "0" in order.
 - press **"Power"** **"Мощность"** button once, "PL10" will be displayed on screen, press "8" to change setting to 80% microwave power.
- press **"START/+30 Sec"** **"СТАРТ/+30 сек"** button to save the settings, you will hear sound notification and "2" will be displayed on the screen. If you press **"START/+30 Sec"** **"СТАРТ/+30 сек"** again, the procedure will be saved as memory 2 and operated.
- if you want to run saved procedure under memory 2, in standby mode press **"0/Memory"** twice, "2" will be displayed on screen, then press **"START/+30 Sec"** **"СТАРТ/+30 сек"** to run.

11. Kitchen timer

1. Press the **"Clock/Kitchen Timer"** **"Часы/Таймер"** button twice, the screen will display **"00:00"**.
2. Press the numerical buttons and enter the timer time (maximum cooking time is 99 minutes and 99 seconds).
3. Press the **"Start/+30Sec."** **"СТАРТ/+30 сек"** button to confirm setting, timer indicator will be lighted.
4. After the set time has elapsed, the indicator will disappear. The oven will beep 5 times. The current time will appear on the display (if pre-set).

Note: The "Kitchen Timer" mode is different from the **"Clock"** mode. The display counts down the time remaining in the "Kitchen Timer" mode.

12. Inquiring function

1. During the cooking cycle, press the **"Clock/Kitchen Timer"** **"Часы/Таймер"** button to inquire the current time and it will be displayed for 3 seconds.
2. During cooking process press **"Power"** **"Мощность"** button to inquire microwave power level and the current microwave power level will be displayed for 3 seconds.

13. Child lock

Lock: The microwave oven must be in standby mode.

Press the **"Stop/Cancel"** **"Стоп/Сброс"** button for 3 seconds, a long "beep" will be heard denoting entering into the children-lock state and **[--]** indicator will be illuminated.

Unlock: In the locked mode, press the **"Stop/Cancel"** **"Стоп/Сброс"** button for 3 seconds, a long beep will be heard denoting that the lock is released.

KITCHEN COOKWARE GUIDE

See the list below of “Materials could be used in a microwave oven” and “Materials to be avoided in a microwave oven”. There may be certain non-metallic utensils that are not safe for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test

1. Fill a microwave-safe container with 1 cup of cold water (250 ml), along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully touch the utensil. If the empty utensil is warm, do not use it for microwave cooking.

NOTE! Never exceed 1 minute cooking time when doing a utensil test.

Materials and utensils could be used in a microwave oven

Utensils	Comments
Aluminum foil	Use for shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing may occur if the foil is too close to the oven walls. The foil should be kept at least 2.5 cm away from the oven walls.
Browning dish	Follow the manufacturer's instructions. The bottom of the browning dish must be at least 5 mm above the turntable. Incorrect use may cause the turntable to break.
Dinnerware	Check if the dinnerware is microwave-safe only. Do not use cracked or chipped dinnerware dishes.
Glass jars	Always remove the lid. Use only to heat food until it is just warm. Most glass jars are not heat resistant and may break down.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturers instructions. Do not close with a metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking and warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Do not leave oven unattended while cooking.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Ensure the utensil is marked “microwave safe”. Some plastic containers may soften as the food gets hot.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food when possible.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and to retain moisture.

Materials and utensils to be avoided in a microwave oven

Utensils	Comments
Aluminum tray	May cause arcing. Transfer food into a microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into a microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from the microwave energy. The metal trim may also cause arcing.
Metal twist ties	May cause arcing and cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid when exposed to high temperatures
Wood	Wood will dry out when used in a microwave oven and may split or crack.

MICROWAVE OVEN TROUBLESHOOTING

Normal	
Microwave oven interfering with TV reception.	Radio and TV reception may be interfered with when microwave oven is in operation. It is similar to the interference of small electrical appliances such as food mixers, vacuum cleaners and electric fans. This is normal.
Dimmed oven light.	In low power microwave cooking, microwave oven light may dim. This is normal.
Steam accumulating on microwave oven door or leaking from vents	In cooking, steam may come out of food. Most will come out from vents but some may condense on cool places such as the oven door. This is normal.
Oven started accidentally with no food in it.	Running a microwave with no food inside it is extremely dangerous.

Malfunctions

Trouble	Possible Cause	Solution
Appliance does not operate	The oven is not plugged in securely.	Remove plug from outlet, wait 10 seconds and re-insert.
	Circuit breaker or fuse is tripped or blown.	Reset circuit breaker or replace fuse.
	There is a problem with the outlet	Plug another appliance into the outlet to check if it is working.
Oven does not heat	The door is not closed properly	Close the oven door securely.
Glass turntable is making a noise while turning	The Roller Ring and oven bottom are dirty.	Clean these parts according to "Cleaning and Maintenance" section.

The recommendations provided above are based on the assessment and analysis of the most common operation problems.

For safety reasons, do not disassemble or repair the appliance on your own. If the problem persists, contact Authorized Service Centre.

CLEANING AND MAINTENANCE

To extend the life of your microwave oven and to ensure your safety we suggest you clean it regularly and remove any food deposits.

NOTE! Always unplug the unit before cleaning.

1. The cavity should be cleaned using a mild detergent solution and warm water.
2. Clean the accessories in the usual way in soapy water.
3. The door frame, door seal and neighboring parts should be cleaned carefully with a damp cloth when dirty.
4. Do not use harsh detergents or abrasives. The inside of the door has a special coating. Do not use abrasive pads or powders that could scratch the surface.

CLEANING TIP: For easier cleaning, place half a lemon in a microwave compatible bowl, add 300 ml of water and heat on 100% microwave power for 10 minutes. Then wipe the internal walls, floor and roof of the oven using a dry, soft cloth.



Disposal of appliances and batteries.

After the implementation of the European Directive 2002/ 96/ EU in the national legal system, the following conditions apply:

Electrical and electronic devices may not be disposed of with domestic waste.

Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale.

This symbol on the product on the user manual or the package indicates that a product is subject to these regulations.

By recycling, reusing the materials or utilizing old devices, you are making an important contribution to protect our Planet.

Do not dispose of the microwave oven with your regular household waste. Please arrange for it to be collected, or take it to your local waste disposal and recycling plant to ensure that the components do not contaminate the environment.

WARRANTY TERMS

This product is subject to 2 years warranty from the date of purchase. During this warranty period, the manufacturer is obliged to provide the warranty coverage at Authorized Service Centers by seeking to repair the hardware, replace the defected parts, or replace the product itself. This warranty is valid only if the seal of the shop, together with the signature of the salesperson in the warranty book, confirm the original date of purchase. This warranty is recognized only if the product was used in strict compliance with the instructions outlined in the User Manual, not repaired or disassembled, and not damaged through misuse. It also assumes no missing accessories. The warranty does not cover wear, tear during daily usage of both the appliance and the consumables (filters, bulbs, non-stick ceramic coating, rubber seals, etc.).



RECKE INDUSTRIES LIMITED
www.reckestyle.com