 


# RECKE

— Quality First —

## REFRIGERATOR

RF-DU2294

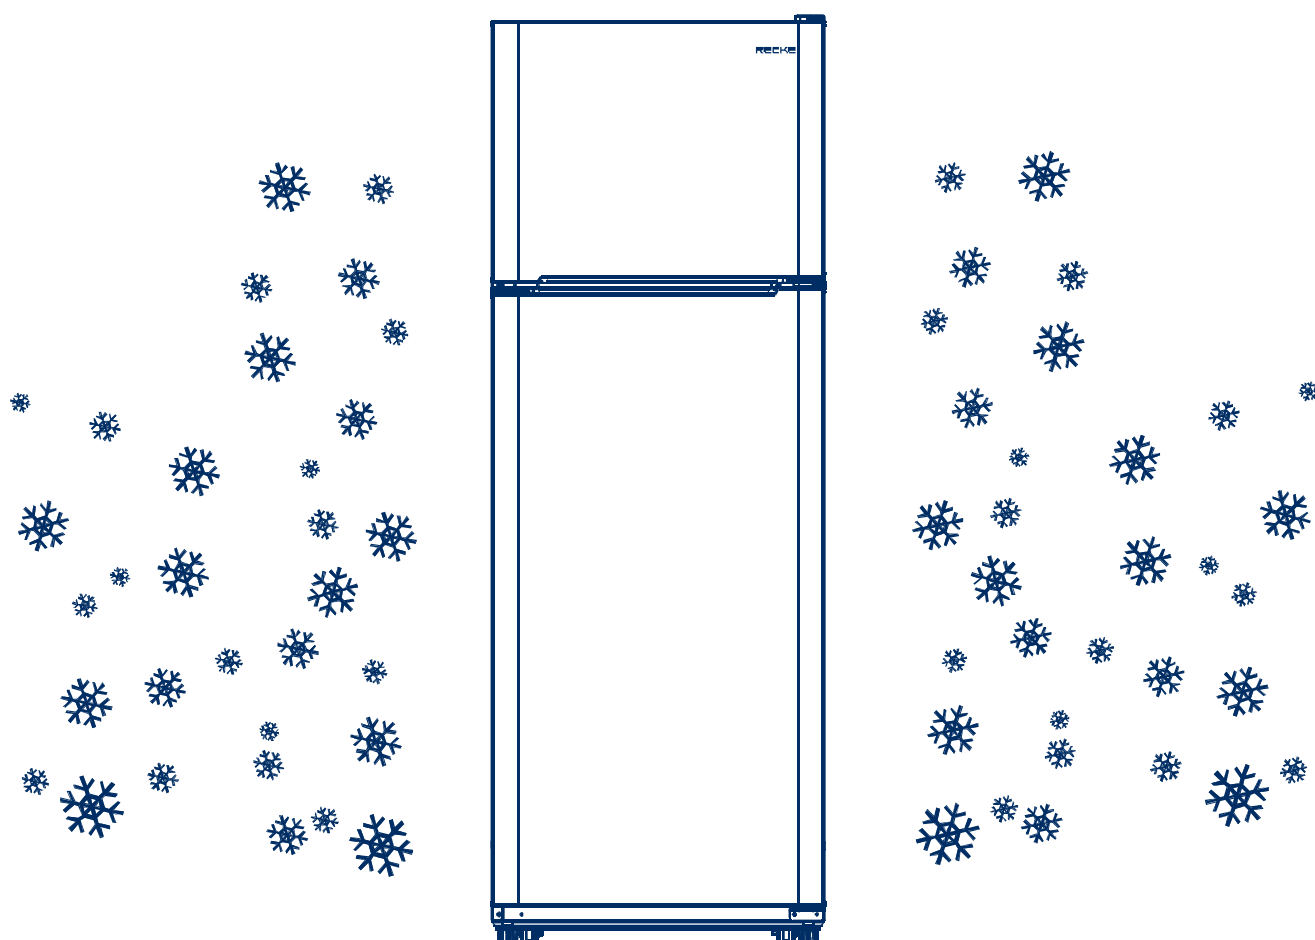

## USER MANUAL

RECKE INDUSTRIES LIMITED  
[www.reckestyle.com](http://www.reckestyle.com)



# INTRODUCTION

**Dear Customer,**

Thank you for choosing RECKE product.

RECKE is the brand focused on high standards of quality, reliability, and modern design with continuous customer care in mind.

We hope that you will enjoy using RECKE Refrigerators and consider purchasing other products offered by RECKE.

For proper handling and care of the RECKE Refrigerators, we recommend reading this User Manual, which contains important operating, safety, and maintenance instructions.

For any further information about RECKE and its products, please visit our website:

**[www.reckestyle.com](http://www.reckestyle.com)**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING:**

-WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

-WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

-WARNING: Do not damage the refrigerant circuit.

-WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

 
-Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments;  
farm houses and by clients in hotels, motels and other residential type environments;  
bed and breakfast type environments;  
catering and similar non-retail applications.


## SAFETY PRECAUTION

Please always follow the safety hint listed below:

The power supply for the unit should be exactly the same as described on the data sheet, and use the standard tri-prong socket.

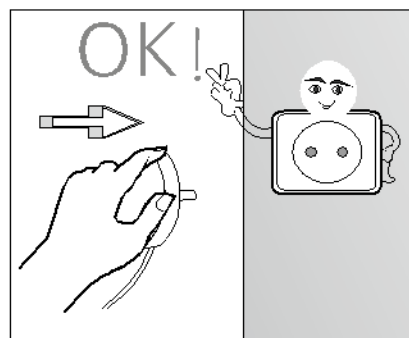


 The unit should be operated in the absence of flammable or explosive fumes. It is prohibited to put flammable, acid or volatile goods in cabinet.

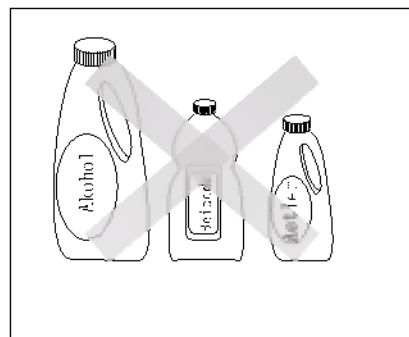


Please unplug the unit first when you replace the light bulb or repair the refrigerator.

 Please unplug the unit immediately if you find any abnormal smell or smoke, and contact your local service center.

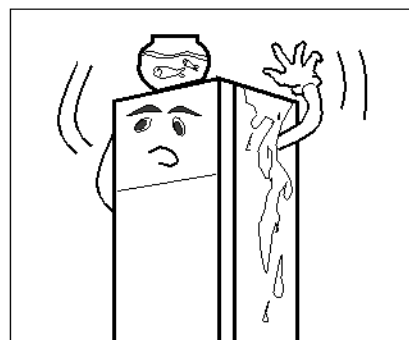

 
Please don't allow water on the cabinet, or put a vessel full of water on the refrigerator. If the refrigerator is wet, the electrical insulation capability may be weakened.

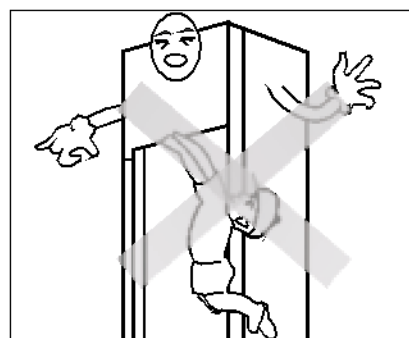

Hanging or sitting on the door is very dangerous, it may overturn the unit and subvert the goods in(or on )the refrigerator.

## PARTS LIST

 Note: Figures in the user manual are only for reference. The actual product may differ slightly.

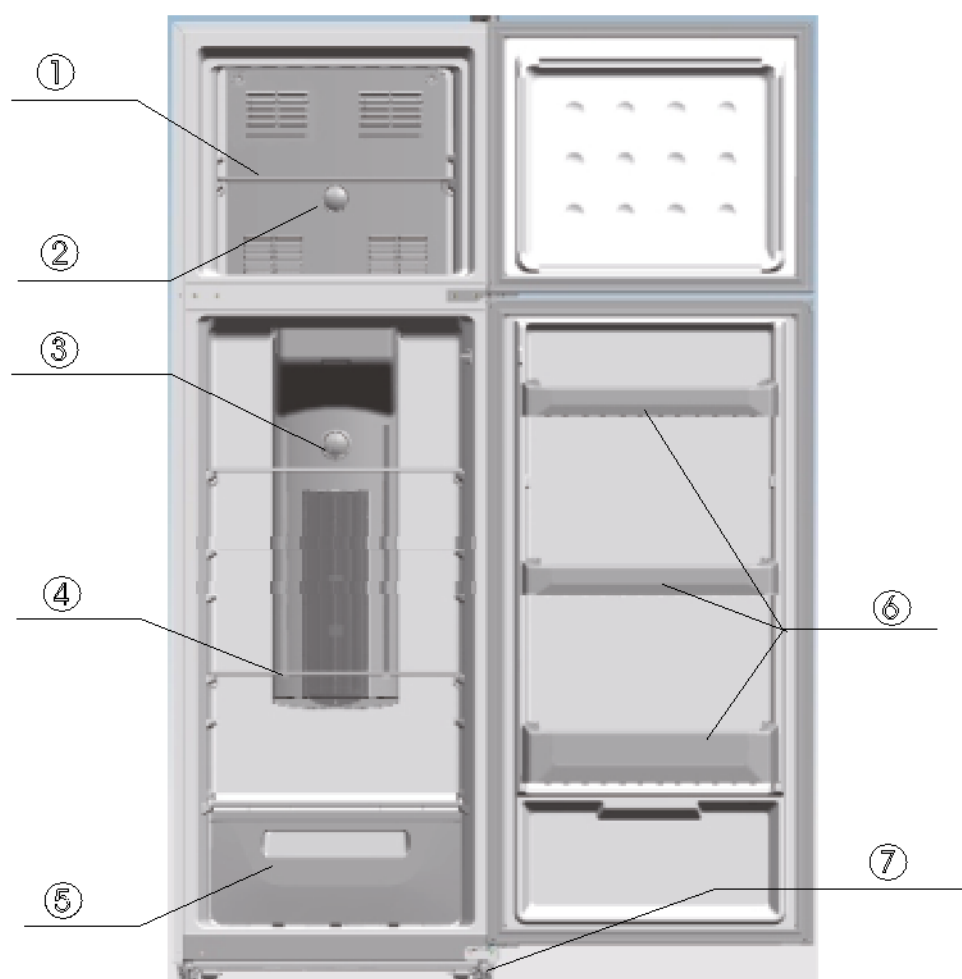


1 – freezer shelf 1 – control knob freezer

3 – control knob refrigerator 4 – shelf 5 – crisper


6 – door tray 7 – adjustable foot

## POSITIONING

 
The unit should be placed in a ventilated and dry environment. Do not put the unit in direct sunlight, and keep it as far as possible from heat sources.

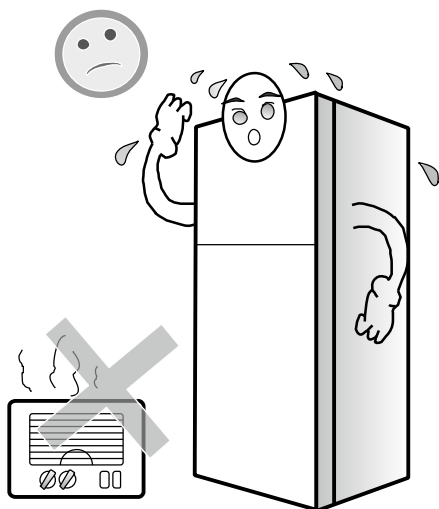

 The unit should be placed on flat and steady ground. Keep the unit level by adjusting the front leg levelers.

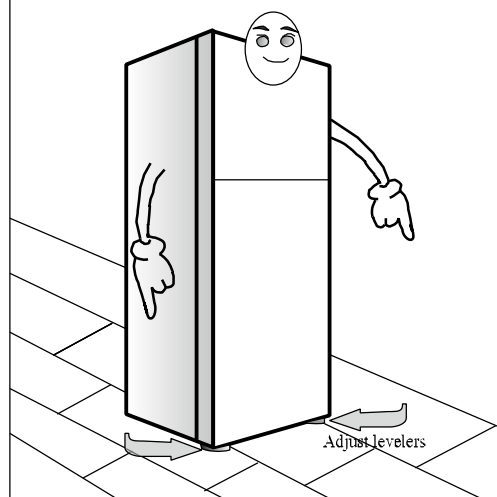


Don't put the unit in cold area.

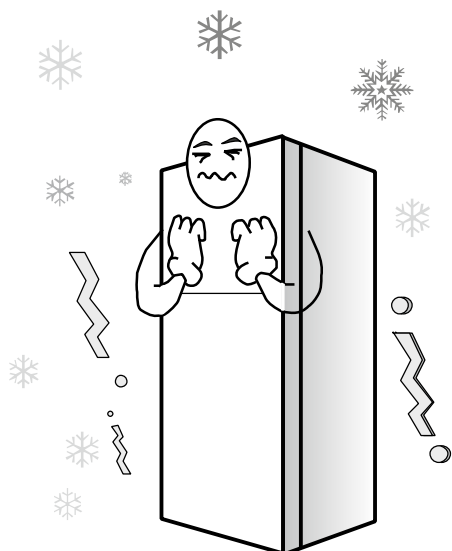 


There should be enough spare space around the unit as shown, to allow proper ventilation.

 No less than 10cm from the back of the refrigerator to the adjacent walls respectively. This requirement is good for open and close of the door and also for heat emission.

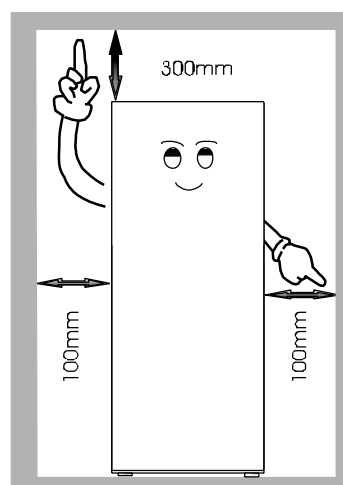


## OPERATION CHECK

 Make sure the unit has been placed properly and all instructions have been observed.

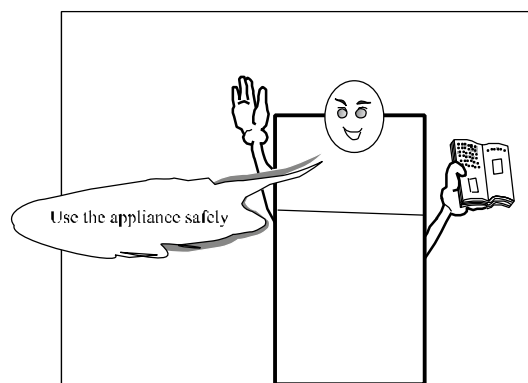


 Adjust the control knob to the middle position, and then plug in the unit. After closing the door for several minutes, both side of cabinet becomes warm.

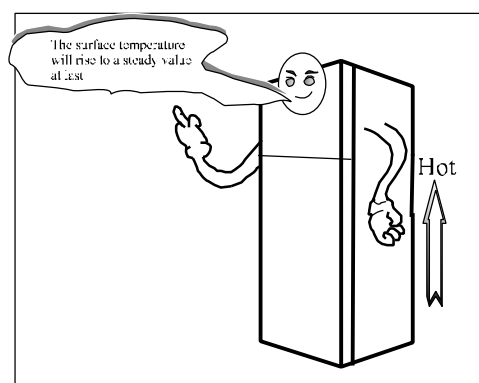

30 minutes later, open the freezer compartment door, feel the cold air, that means the unit works properly.

 After a period of time to set the compartment temperature at the desired temperature.

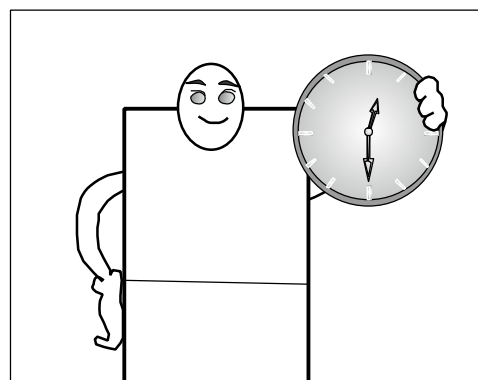



## FOOD STORAGE

 
 
The temperature in the fresh compartment is between 0-4 degrees C, although this lower temperature can limit the bacteria propagation, it is not suitable for a long period of food storage.

### FRESH FOOD STORAGE

Cooked food should be cooled down to room temperature before putting into the refrigerator.

It is better to put the food in a sealed bag before placing into the refrigerator.


**In order to keep vegetables** fresh in the crisper, any water should be removed first, otherwise the vegetables may spoil. If you put the vegetables in a bag, they may be stored for a longer period.

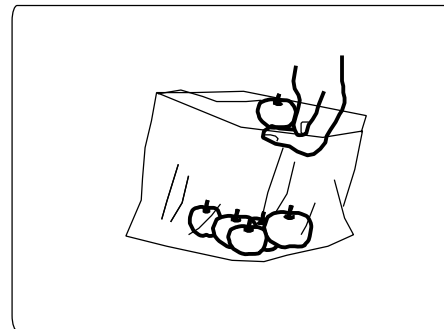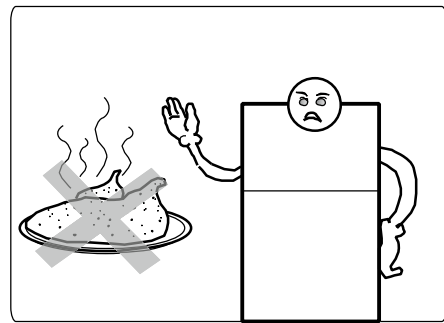

## FOOD STORAGE

### CONTROL KNOB

 It used to adjust the temperature of the different compartments. The user can adjust for desired temperature.

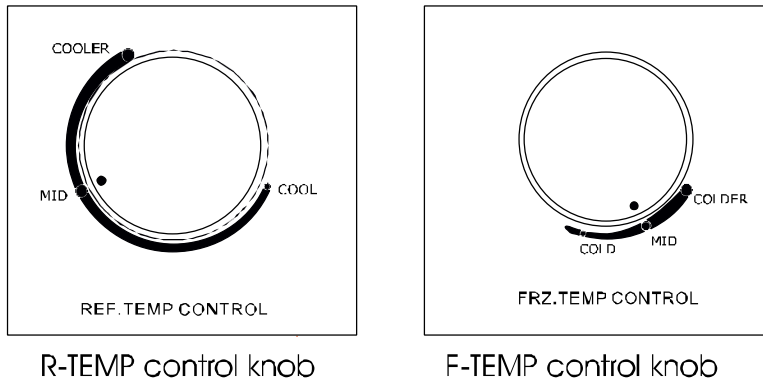

The user can adjust the temperature of cooling or freezing by turning the control knob located at the back of the cooling zone cabinet, According to the above Picture:

The left knob is used for controlling temperature of cooling while the right one is for freezing.

#### R-TEMP control knob

Turn the knob clockwise, the cabinet temperature will be cooler, counter-clockwise, the temperature will be raised.

 
#### F-TEMP control knob

Turn the knob counter-clockwise, the cabinet temperature will be colder, clockwise, the temperature will be raised.

### FROZEN FOOD STORAGE

The temperature of the freezer is colder than  $-18^{\circ}\text{C}$ . It is to store food to be kept for a long period.

After buying frozen food, please put it into the freezer compartment as soon as possible.

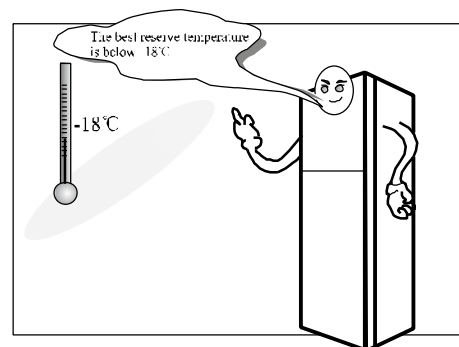

## FOOD STORAGE

Any hot food must be cooled down to room temperature before it is put into the freezer.

 
 
 
Please don't put glass containers filled with liquid into the freezer compartment as the glass may break.

It is better to sort the food before putting them into the freezer. Put the same kinds of food together to help minimize the time of the freezer door opening when you take the food out, and helps to save energy.

The food should not be put too close to the outlet or inlet of the airflow. It may affect the air circulation.

### DOOR TRAY

There are some ventilation holes on the bottom of the door tray, please try not to block all of them when you put the food in.

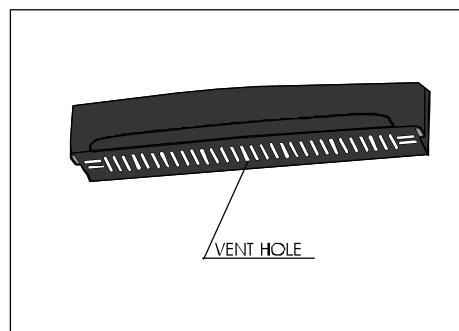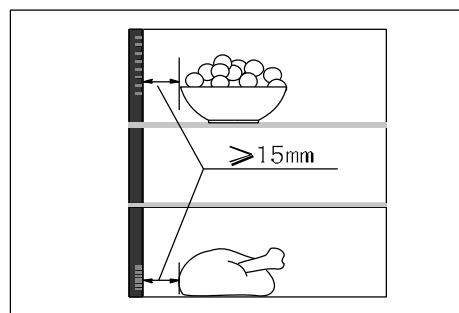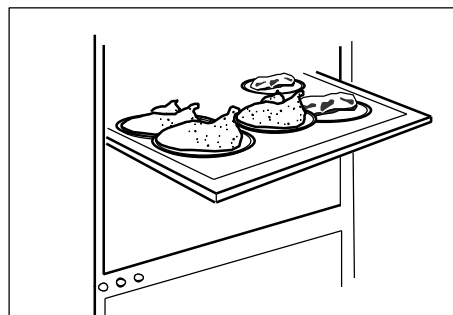


## MAINTENANCE

### CLEANING

Always unplug the unit before cleaning.


 
The unit should be cleaned frequently both inside and outside using water and a little neutral detergent. Never use boiling water, harsh cleaning agents, acid, alkali or benzene etc.

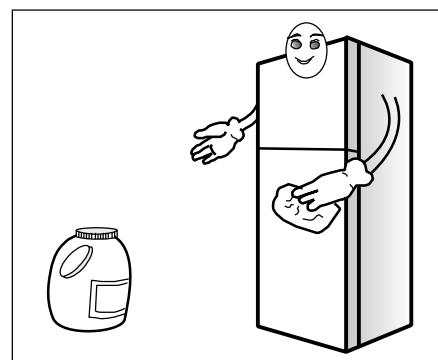

### WATER PAN CLEANING


**Make sure the fridge is unplugged before you take out the water pan.**

  The water pan is located in the back of the cabinet. Its function is to collect and evaporate the defrost water. Usually it doesn't need special care, but if you find some water overflow or odd smell, it may need to be checked and cleaned. Pull out the power cord first. Lift the water pan up a little, and then pull it straight out carefully. (Caution: make sure the discharge pipe is not too hot). After cleaning, refix the water pan into the original position. Make sure that the pipe is on top of the water pan before you push it into the original position.

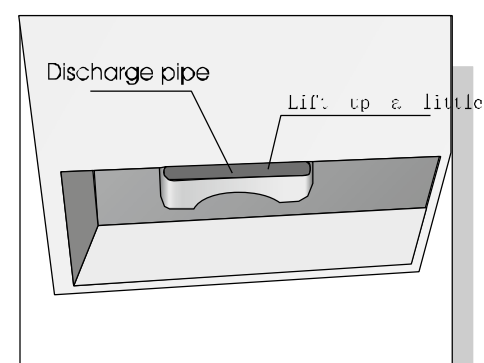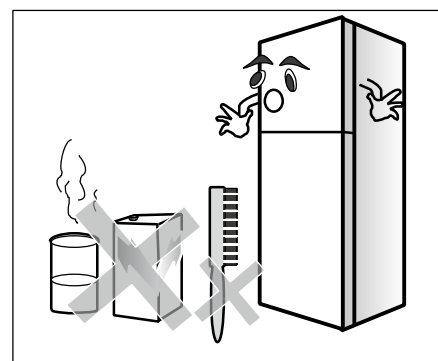


### LEAVING THE UNIT SWITCHED OFF

 If the unit will be switched off for a long time, the plug should be pulled out, then clean the unit thoroughly. Ensure that the door cannot be fully closed (leave a suitable gap), and place the unit in a well-ventilated area to avoid any odour.

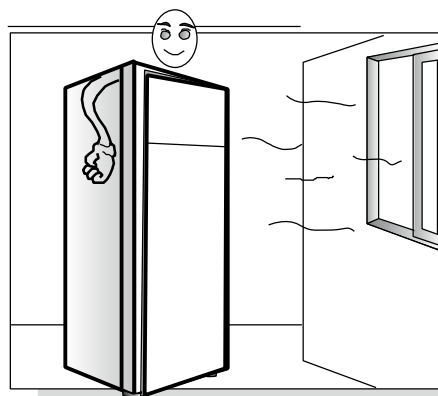

## TROUBLE SHOOTING

 Before calling for service, please check the following issues first:

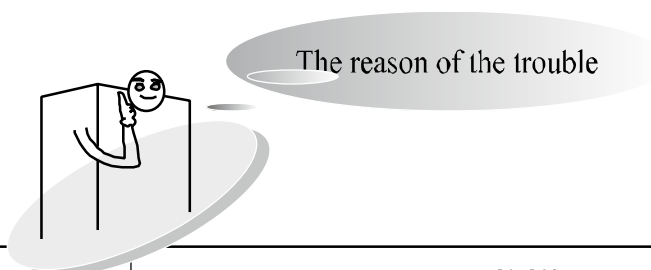

Trouble	Possibility
The unit doesn't work	<ul style="list-style-type: none"><li>● Power is not on.</li><li>● Low voltage</li></ul>
The unit works inefficiently	<ul style="list-style-type: none"><li>● The control knob is set at a "low number" position</li><li>● Too much food in the unit</li><li>● Hot food in the unit</li><li>● Door opened &amp; closed too frequently</li><li>● There is a heat source nearby</li><li>● The unit is exposed to direct sunlight</li></ul>
Noise	<ul style="list-style-type: none"><li>● Floor is not flat, and the unit is not placed steadily.</li><li>● Contents are not placed in the right position</li></ul>
Food frozen	<ul style="list-style-type: none"><li>● Is the control knob set at proper position? Too high?</li><li>● Is the food near the outlet of cold draught</li></ul>


## TROUBLE SHOOTING
 
### FOLLOWING PHENOMENON IS NORMAL

The sound like a rivulet is caused by the refrigerant flowing inside of the system pipe.

While the unit runs, heat is emitted from both sides of the cabinet.

When the weather is too humid, the edges around door may have a little moisture, wipe it with a dry cloth.

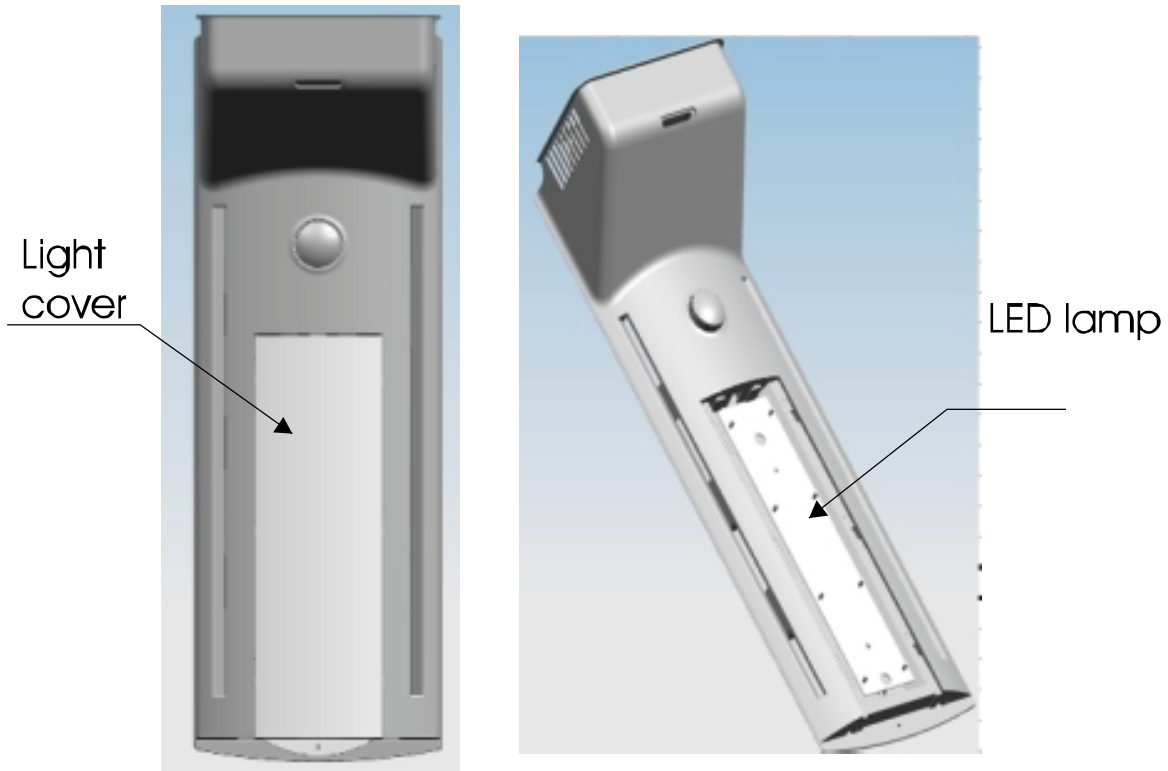


### CHANGING THE LIGHT BULB

Please contact the service agent or similarly qualified persons if the light need be changed.

Before changing the light board ,please unplug the fridge first, then pull down the light cover and change the light board according to the picture,as shown above .

Make sure the light board is 220-240V~/50Hz/2W.

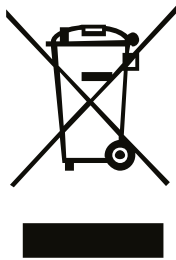Correct Disposal of this product	
	<p>Correct Disposal of this product</p> <p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

### Energy Saving Tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.



**RECKE INDUSTRIES LIMITED**  
**[www.reckestyle.com](http://www.reckestyle.com)**